



The **ENERGIZER**® Work Light delivers the durability and features users need, all in a sleek yet powerful area light solution. This light's durable construction makes it the perfect partner for any DIY projects and for outdoor and everyday usages. The light features a movable handle that can be used to angle the light as needed for maximum versatility.

Lumens	Runtime	Beam Distance	Drop	Water Ingress



BATTERY SPECIFICATIONS

Battery Type	Energizer E91
Battery Size	AA
Number of Cells	4

BATTERY PERFORMANCE

Modes	Lumens (lm)	Runtime (h)	Beam Distance (m)
High	250	8	-
Low	100	18	-

Modes

High, Low

DESIGN BENEFITS

- ✓ Durable construction for tough situations
- ✓ Adjustable handle for positioning the light where you need it for maximum versatility
- ✓ Water Resistant, ideal for outdoor projects
- ✓ Easy to use large push button that can be used with gloves

PERFORMANCE BENEFITS

- ✓ 2 mode switch to adjust brightness and runtime

LIGHT AND POWER SOURCE

- ✓ Features LED Technology
- ✓ Operates on 4 AA Batteries
- ✓ CCT 5000K
- ✓ CRI 70

PRODUCT SPECIFICATIONS

Weight:	305 Grams / 10.8 Ounces
Dimensions:	156.6 mm x 154.4 mm x 49.5 mm 6.17" x 6.08" x 1.95"

ELECTRICAL CHARACTERISTICS

Nominal Power Consumption:	1.74 W
Batteries:	4 AA Energizer E91 3V dc
LED Specifications:	LED 3.0V cc / 580 mA

DISCLAIMERS

Tested according to ANSI FL1 Standards.
This device complies with part 15 of the FCC Rules.
Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
*Light output measured from LED. Value is only applicable to the LED. Actual device light output may vary.
**Endpoint determined at 1% of initial value.

CERTIFICATES AND COMPLIANCE

EMC, EN62471, FCC			
-------------------	--	--	--

Publish Date: 07-06-2022

OPERATING INSTRUCTIONS

1. Press on/off button to turn on.
2. Press 1x for high.
3. Press 2x for low.

BATTERY CHANGING INSTRUCTIONS

1. Lift latch on back.
2. Remove back cover
3. Insert batteries according to diagram.
4. Replace cover and relatch.