

FLAIR

5288803012




User manual
Bedienungsanleitung
Mode d'emploi
Handleiding
Manuale
Manual del usuario
Használati utasítás
Instrukcja obsługi



LUTEC

Incl.

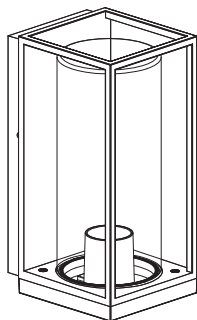


x 4




x 4



 x 1



Ø 6mm

 






IP44




+8mm




INFO:
Art.:
5288803012
220-240V
-50/60Hz

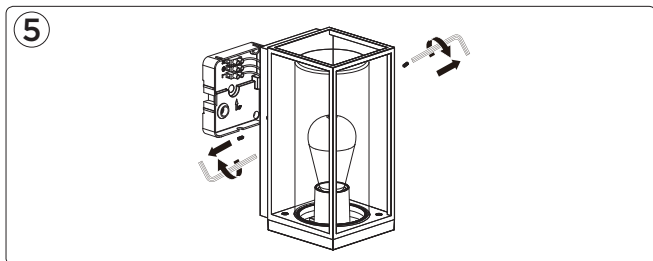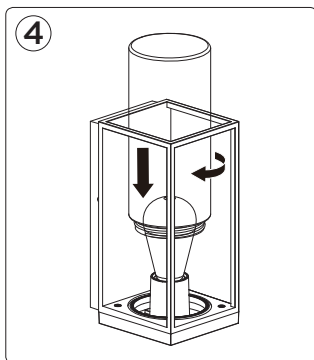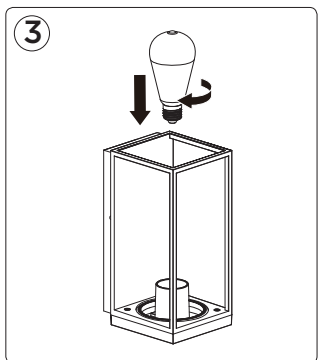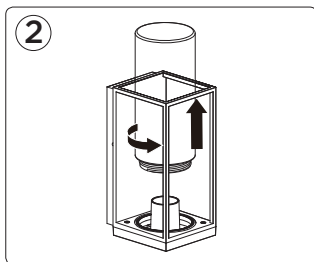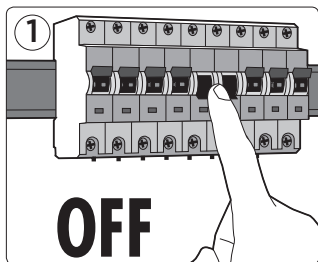


6

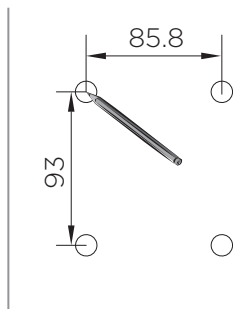


7



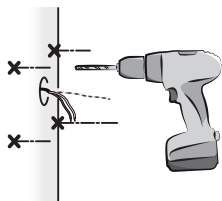


8

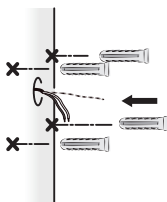


9

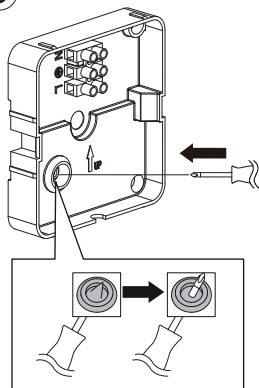

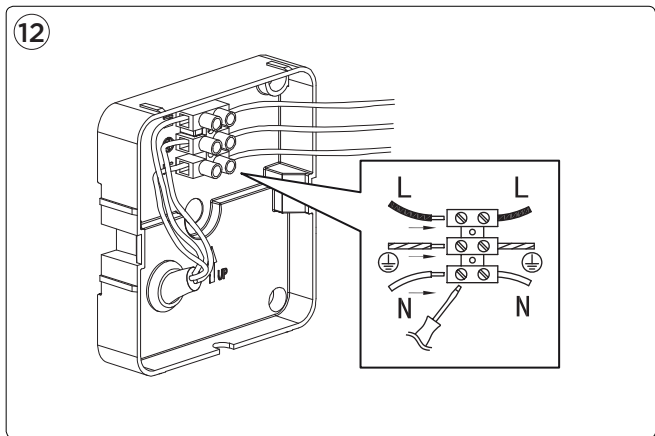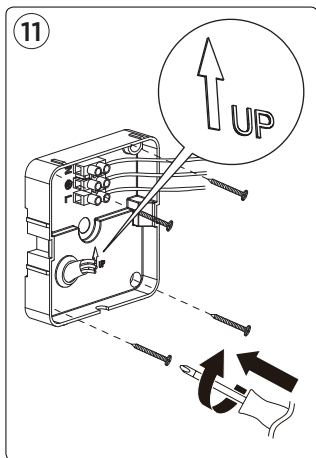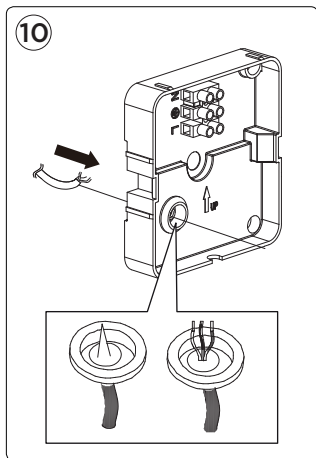

13

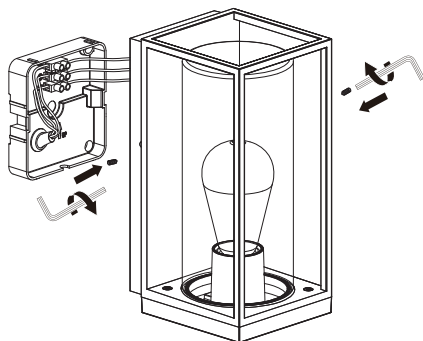



LUTEC Europe NV

Herentalsebaan 425
B-2160 Wommelgem - Belgium
+32 3 284 51 62
info@luteceurope.com
www.lutec.com



www.lutec.com/services/global-network