




www.weka-holzbau.com



Schwedenhaus in Elementbauweise

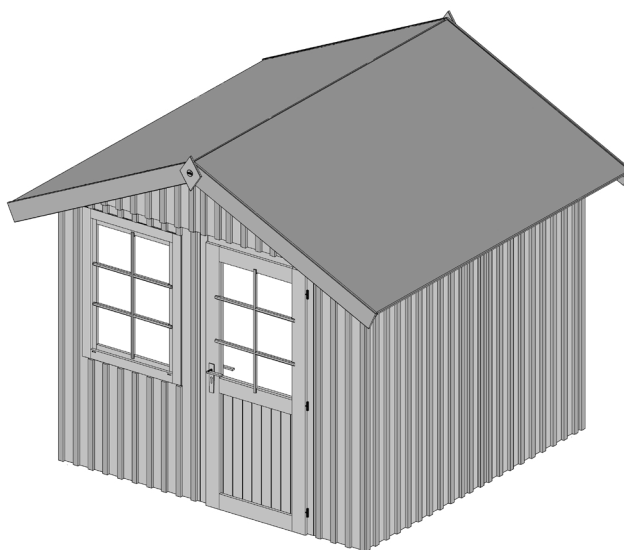

410.2525.20000

410.2525.23000


Montage-, Bedienungs- und Wartungsanleitung



+





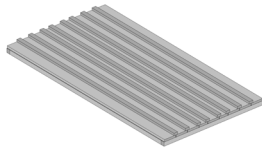
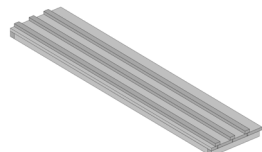




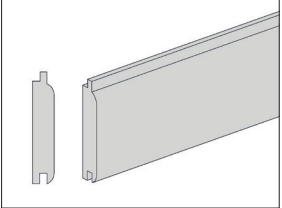
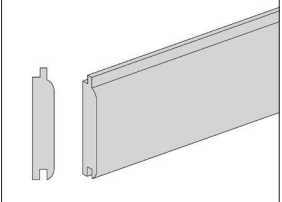
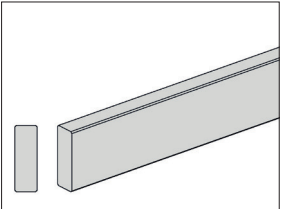
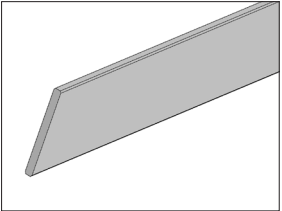
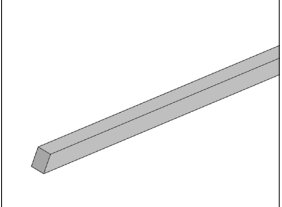
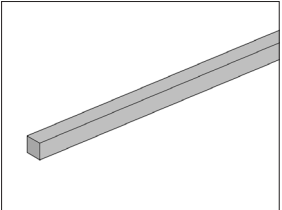
=




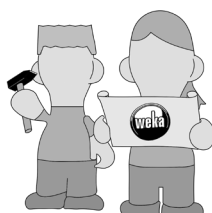

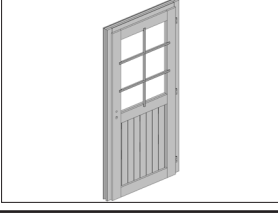
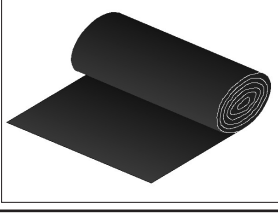
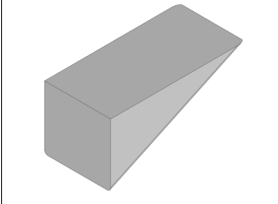









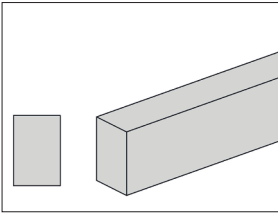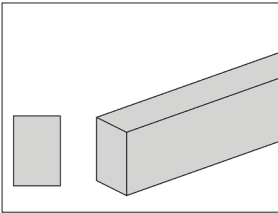
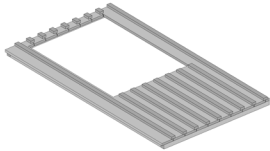


Jetzt
scannen
und noch
mehr entdecken!



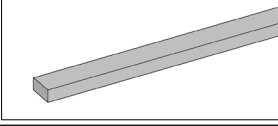
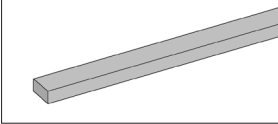
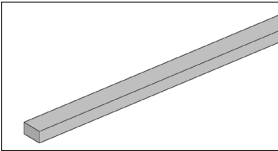
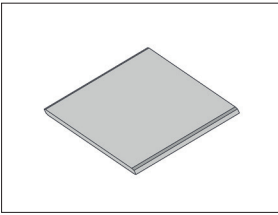


Pos	Bild	Abmessung (mm)	Anzahl (Stück)
			410.2525.2x001
①	R002.0650.2520 	40/60/2520	2
②	R002.0650.2360 	40/60/2360	6
③	B410.01.0002 B410.01.0802 	82/1167/2030	1
④	B410.01.0003 B410.01.0803 	82/725/2030	6
⑤	B410.01.0006 B410.01.0806 	82/1070/2030	3
⑥	B410.01.0001 B410.01.0801 	82/427/2030	1
⑦	B410.01.0004 B410.01.0804 	82/625/2560	2



Pos	Bild	Abmessung (mm)	Anzahl (Stück)
			410.2525.2x001
8	B410.01.0005 	82/600/2560	2
9	R002.0162.2435 	18,5/96/2435	28
10	R002.0162.2944 	18,5/96/2944	40
11	R002.0530.1580 	15/45/1580	4
12	G410.01.0001 G410.01.1001 	18,5/146/1730	4
13	G410.01.0003 	30/30/1710	4
14	G410.01.0004 	28/28/2030	2

Pos	Bild	Abmessung (mm)	Anzahl (Stück)
			410.2525.2x001
15	G410.01.0006 G410.01.0806 	30/60/2400	2
16	G410.01.0007 G410.01.0807 	30/60/2560	2
17	G410.01.0010 G410.01.0810 	22/40/2030	14
18	G100.10.0001 G100.10.1001 	18.5/160/260	2
19	B100.11.3410 B100.11.3470 	53/842/1134	1
20	B100.12.6430 B100.12.6470 	63/965/2030	1
21	100.1006.00.00 	-	1
22	G410.01.0011 	38/40/80	4

M410.001 410.2525.2x001		Abmessung (mm)	Anzahl (Stück)
Pos	Bild		410.2525.2x001
M1	K001.1050.0004 	5,0 x 100	15
M2	K001.7045.0004 	4,5 x 70	180
M3	K010.6040.0004 	4,0 x 60	90
M4	K001.4040.0004 	4,0 x 40	240
M5	K001.3030.0004 	3,0 x 30	50
M6	K010.5022.0001 	2,2 x 55	770
M7	K011.1320.0001 	2,0 x 13	500
M8	K045.1270.0001 	-	1
M9	K036.3135.0001 	65	1
M10	K100.1010.0006 	2,0/50/50	2
M11	K004.9522.0006 	2,2 x 9,5	4

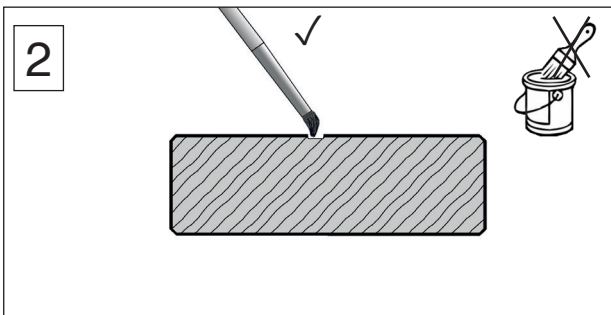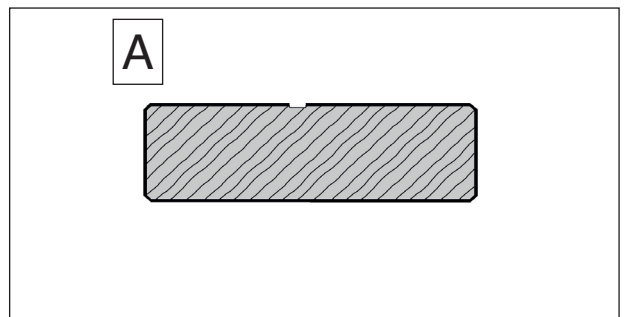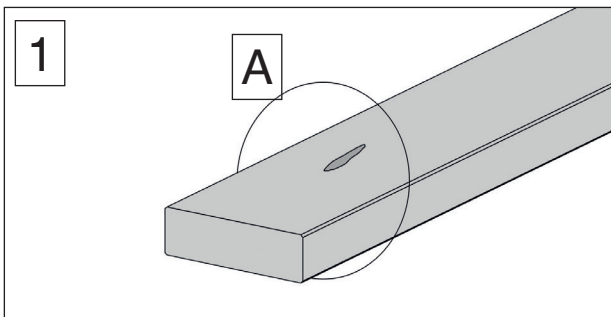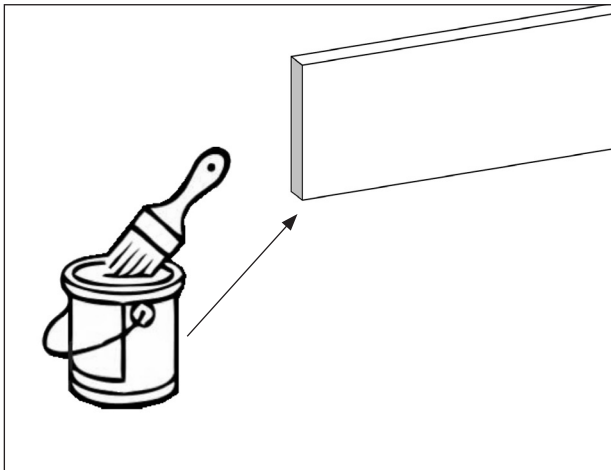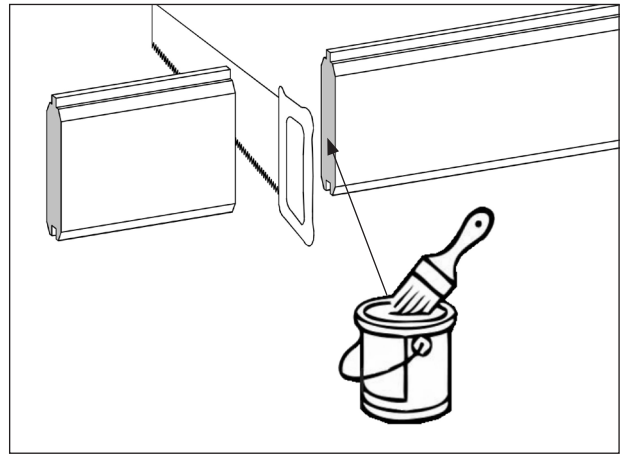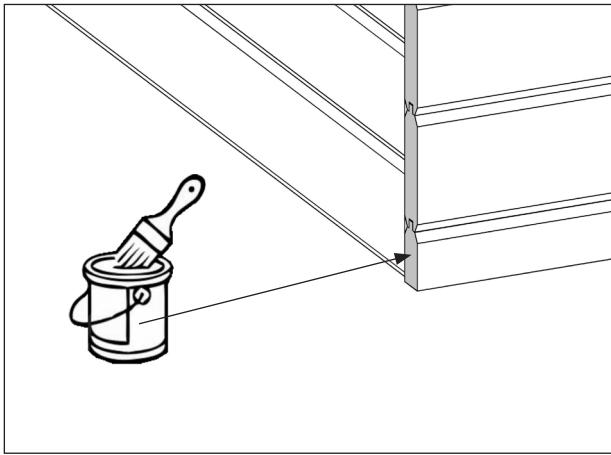




Farbe dünn auftragen und nur auf der Schadstelle.

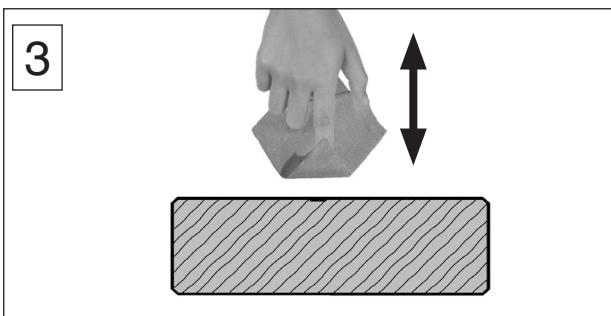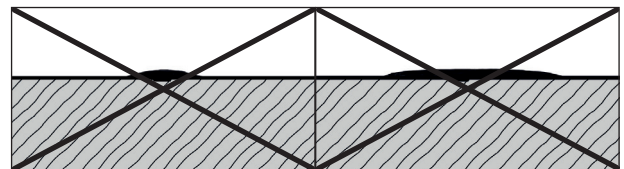



Farbe abtupfen.

Vorgang wiederholen bis die Farbe identisch ist.




1

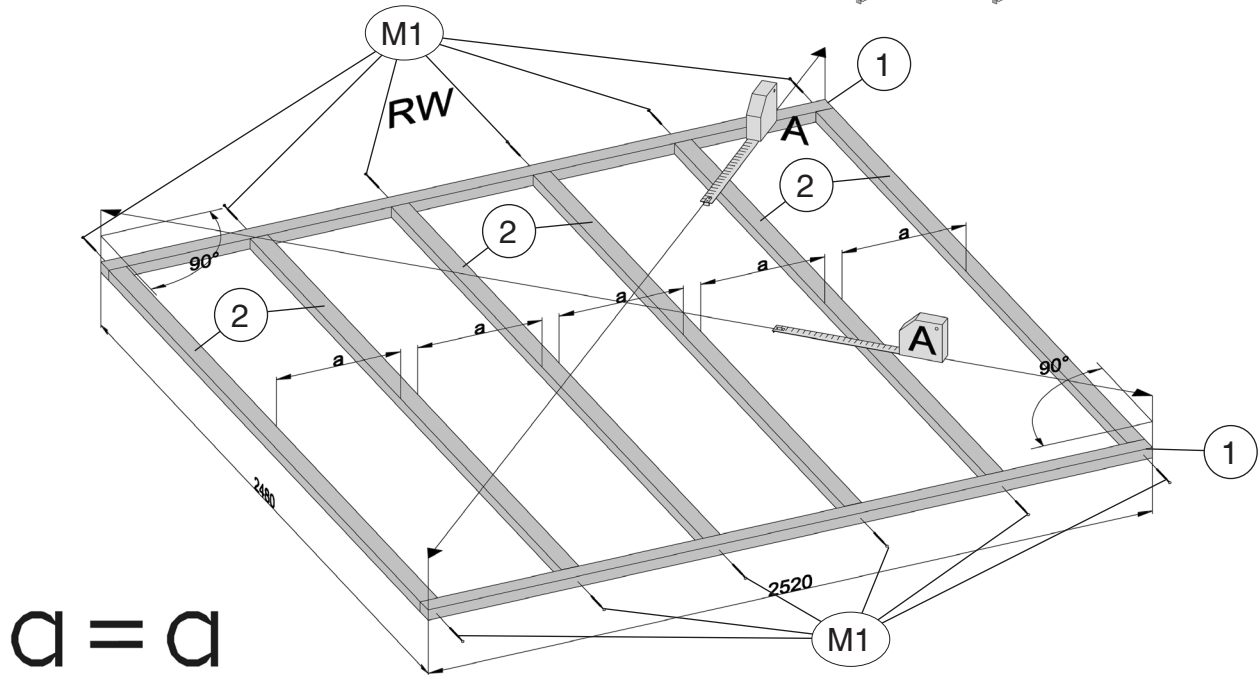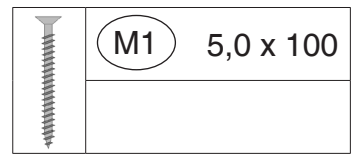





2

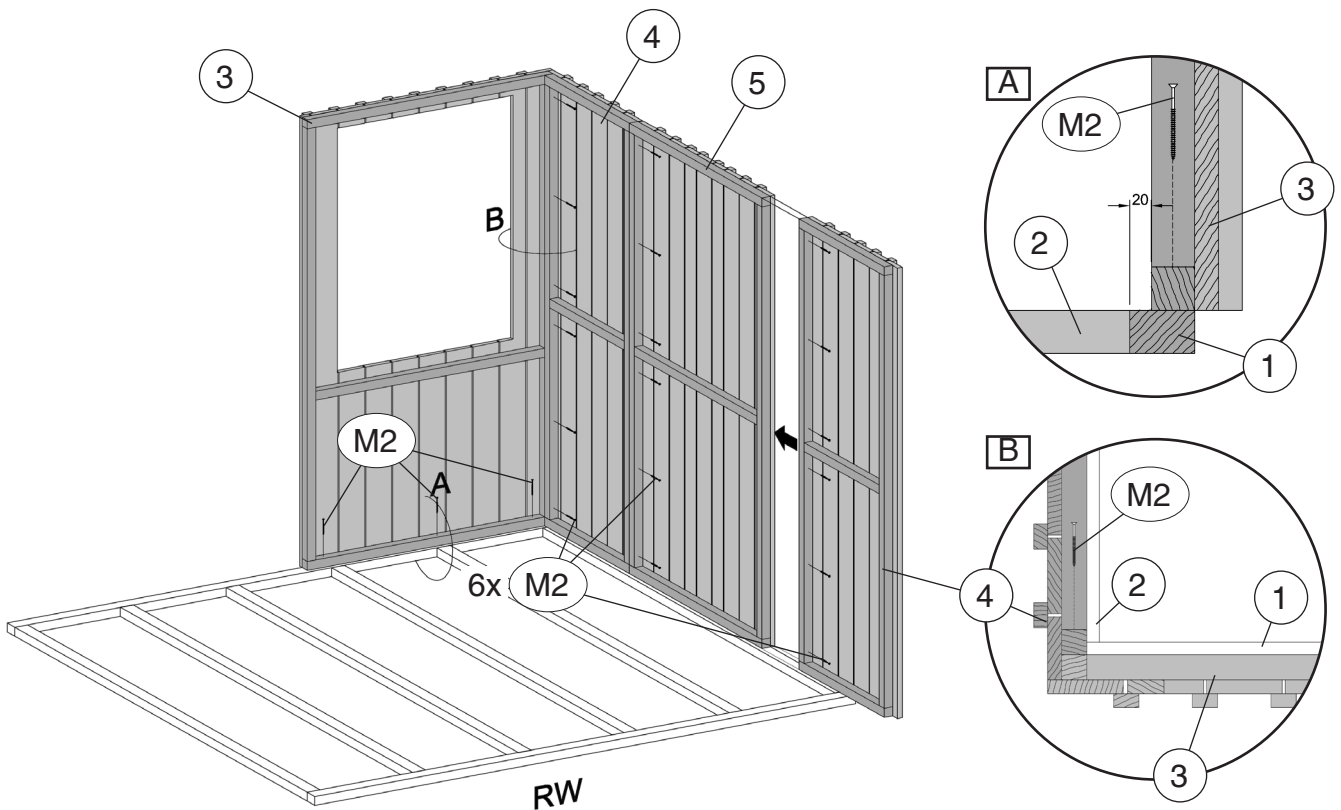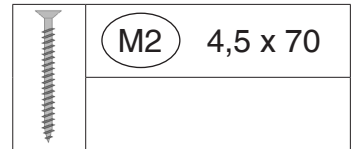





3

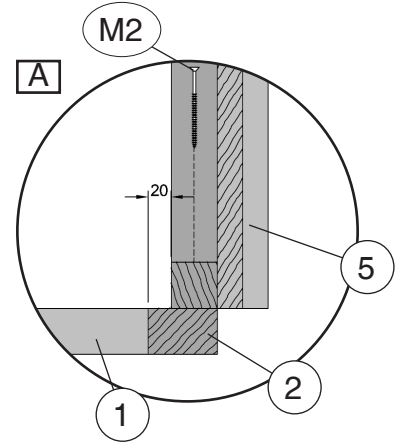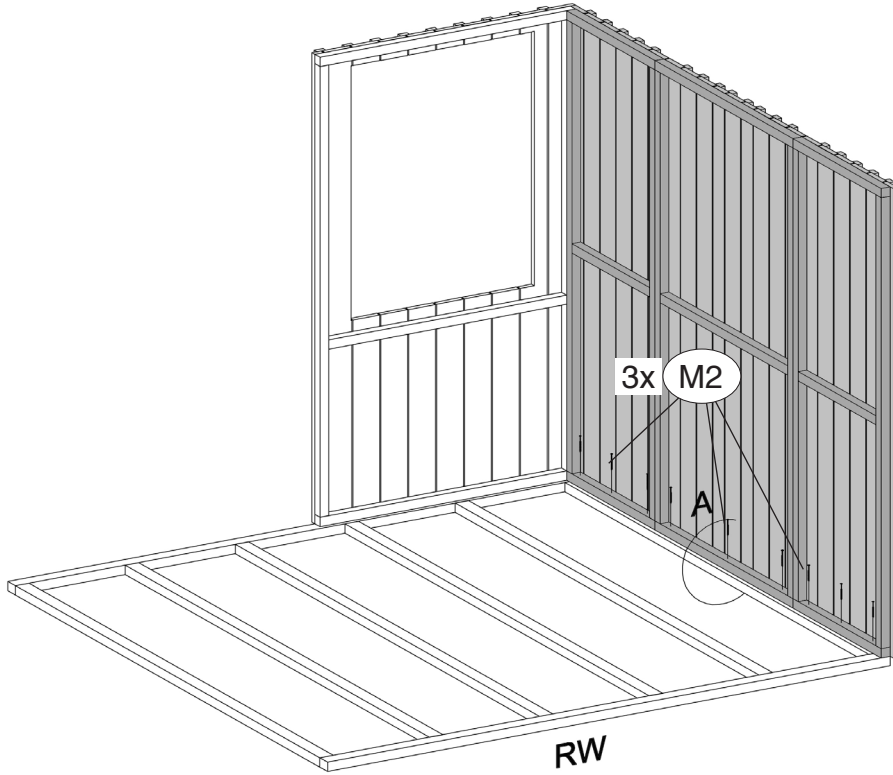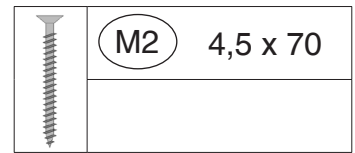





4

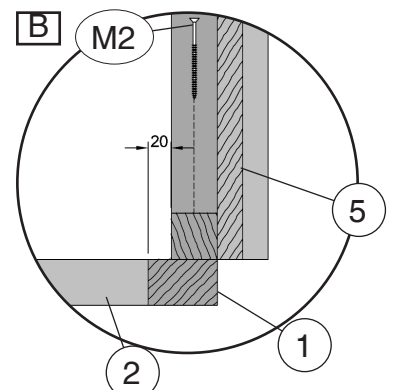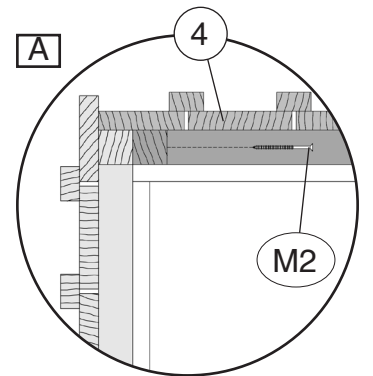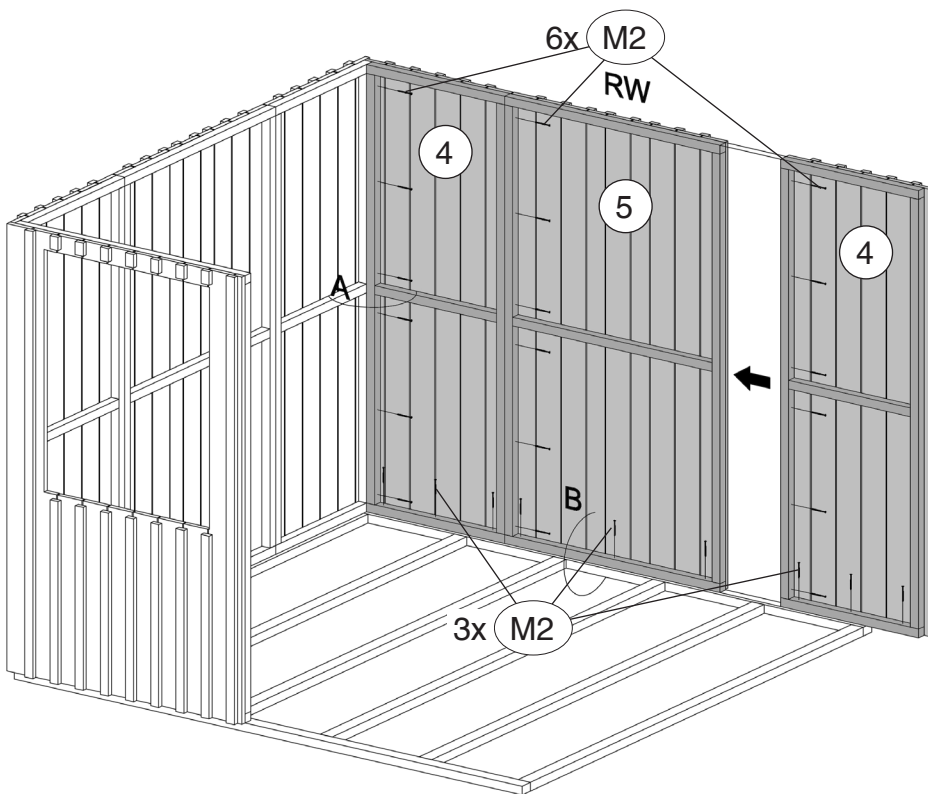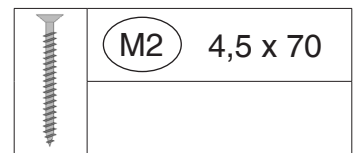




5

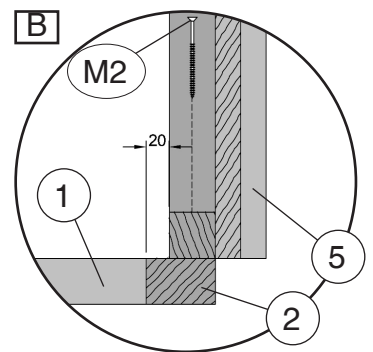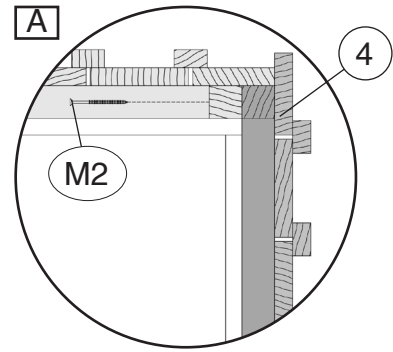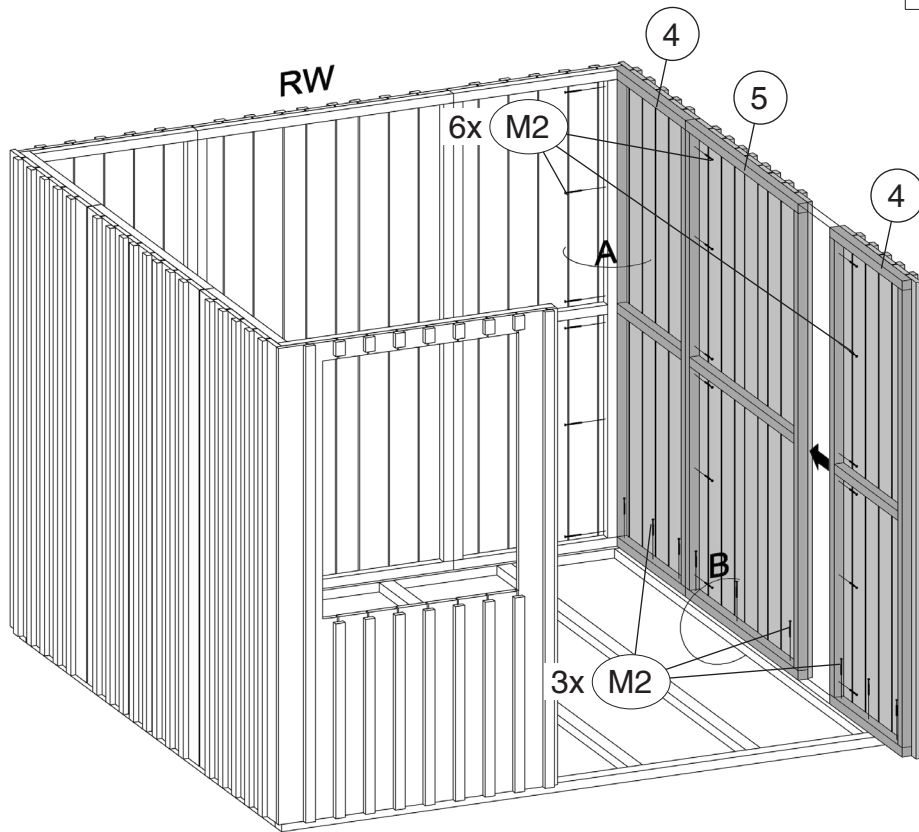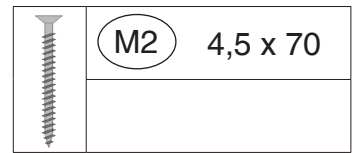





6

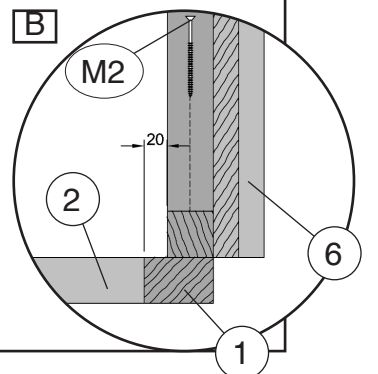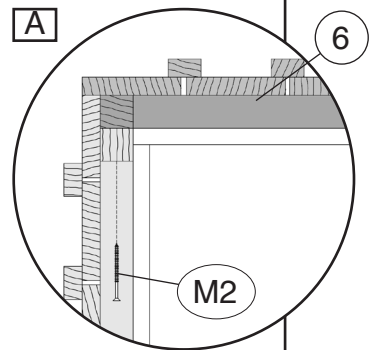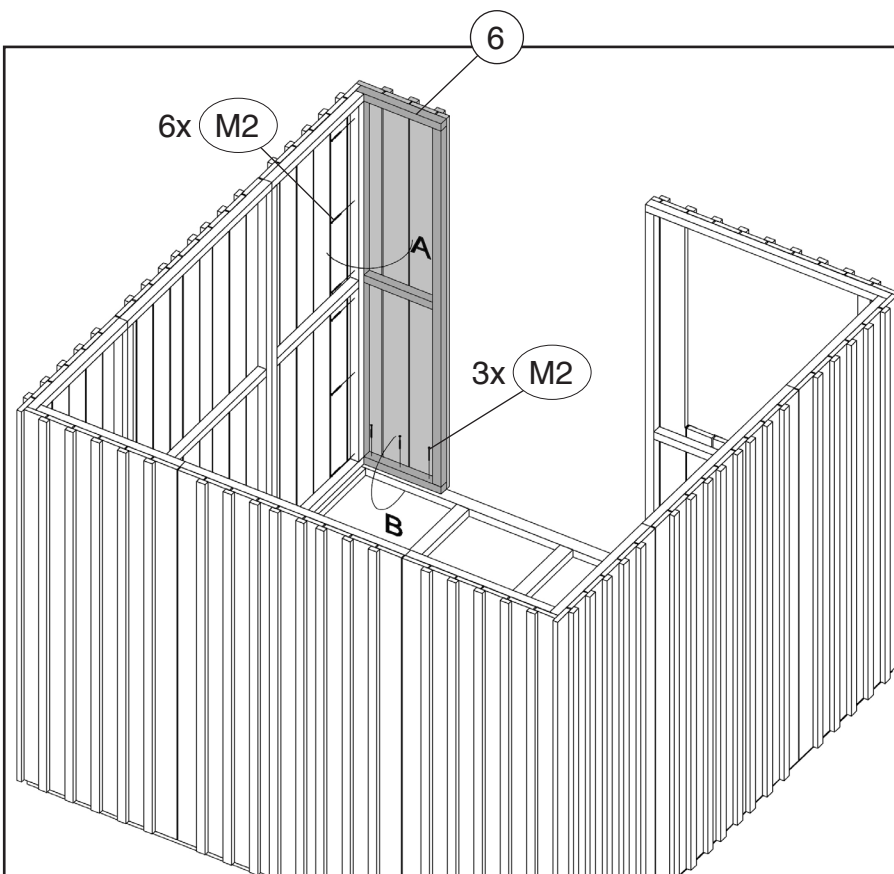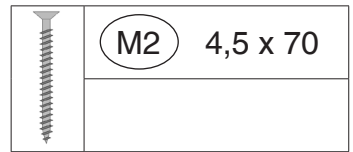


7

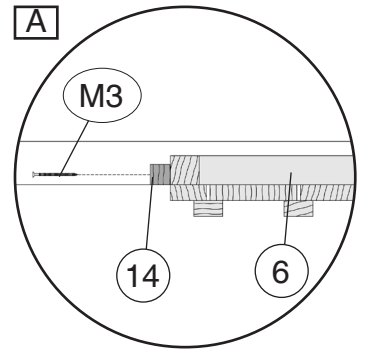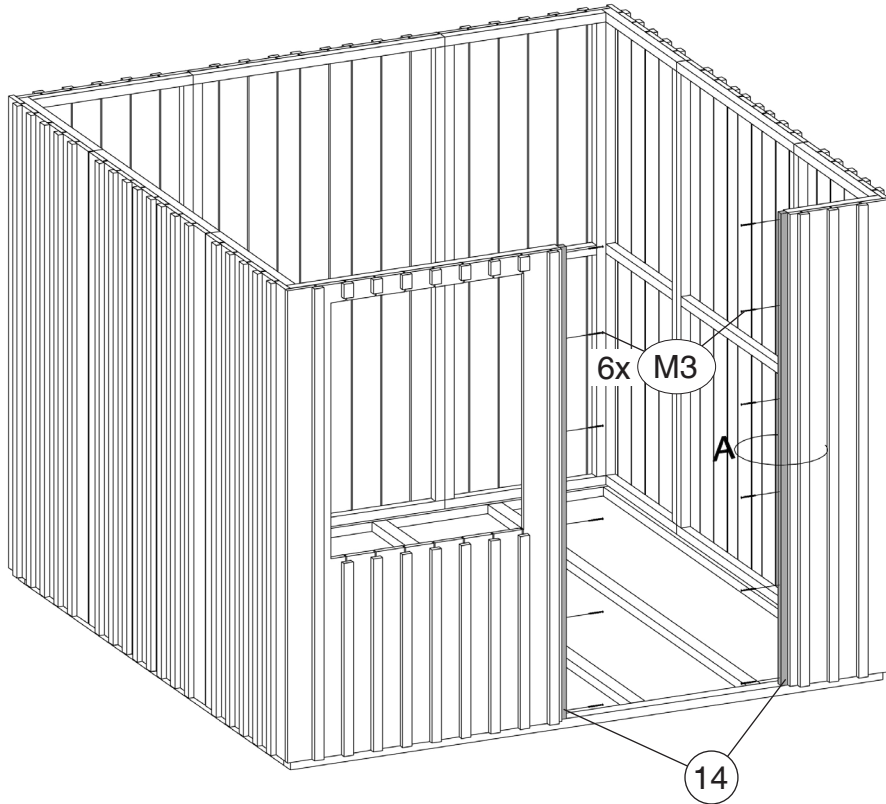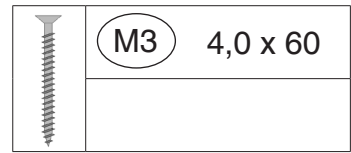


8

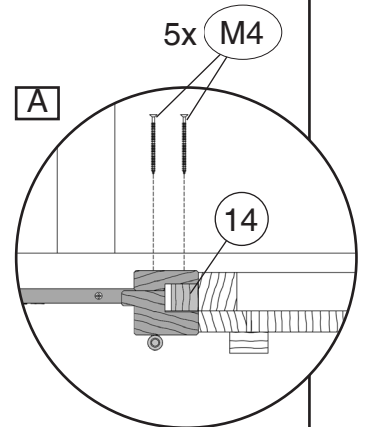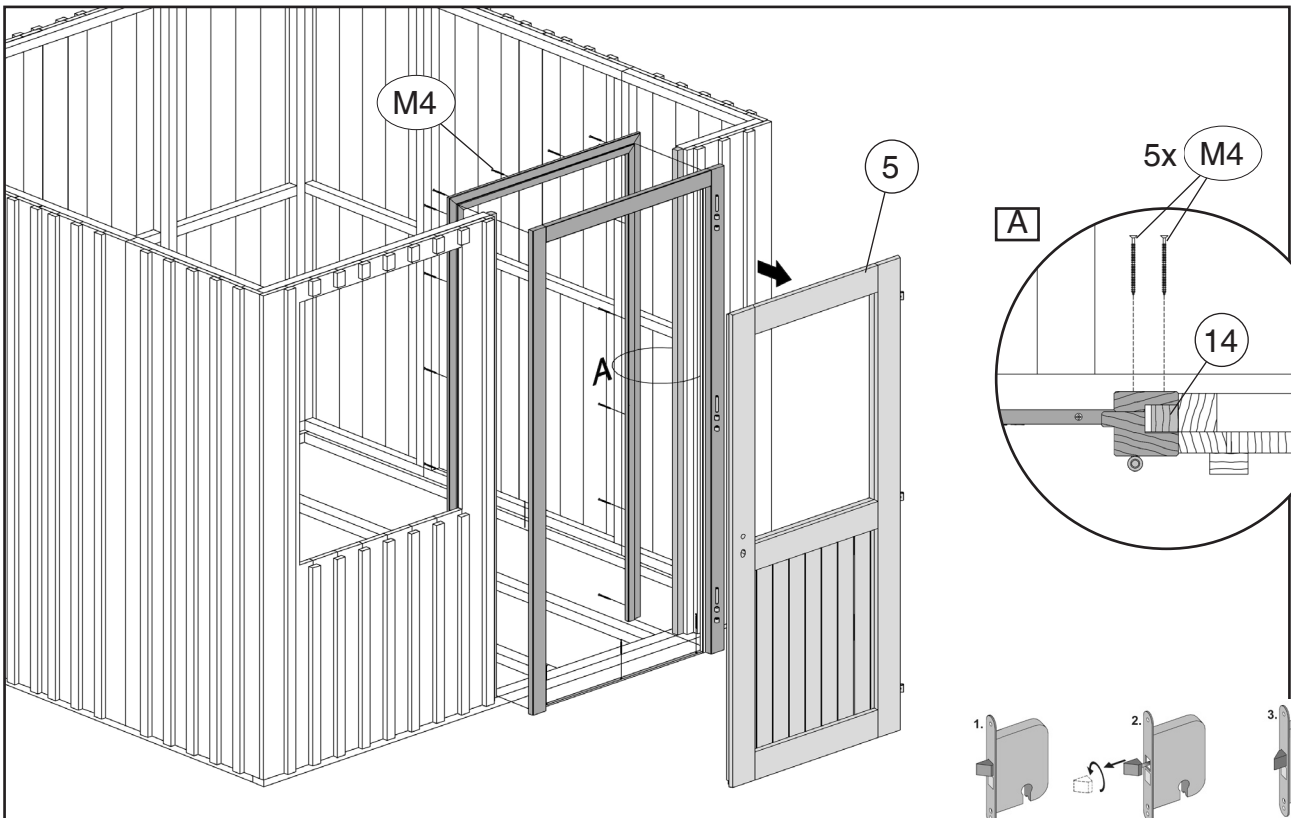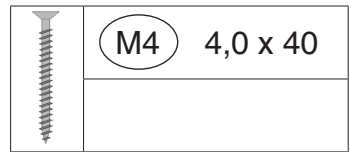


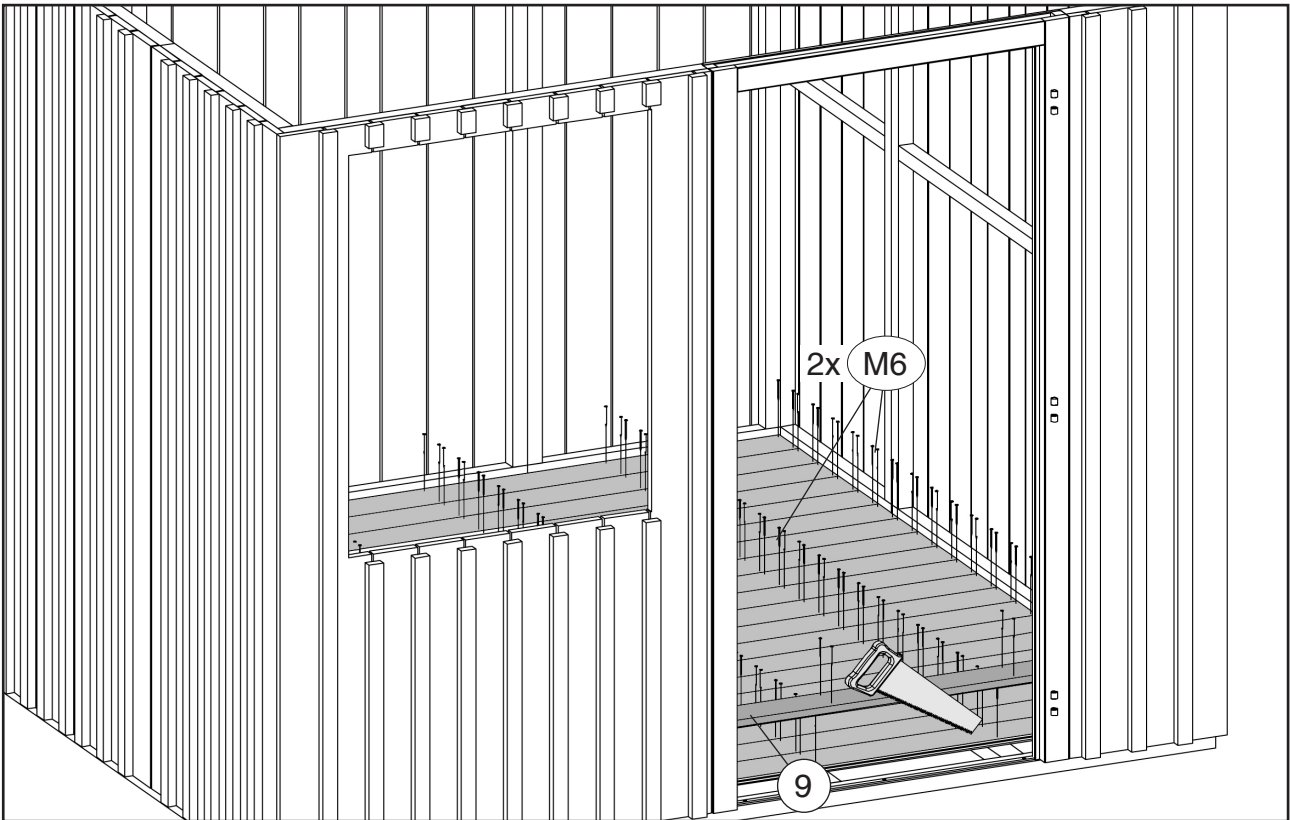
9

	M6 2,2 x 55
---	-------------

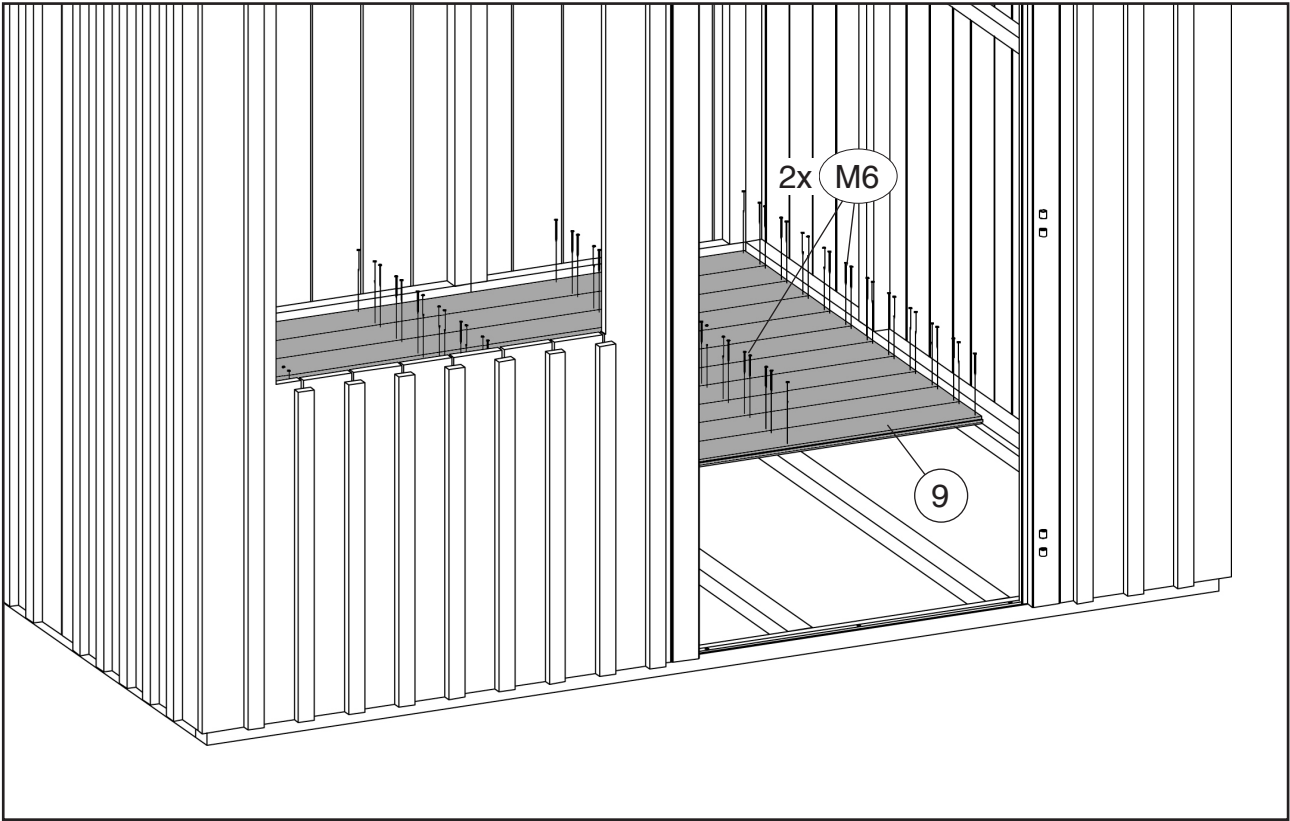


10



	M6 2,2 x 55
---	-------------





11

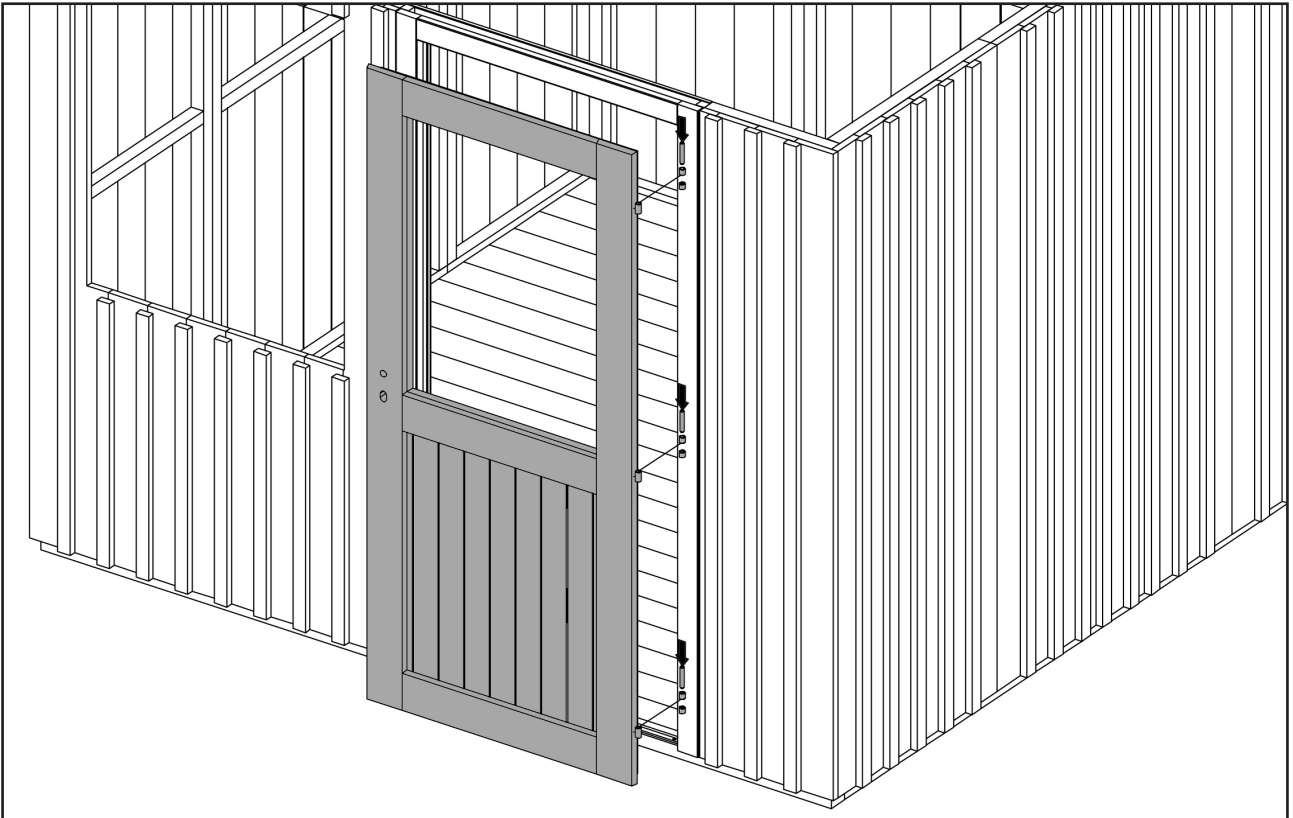

12

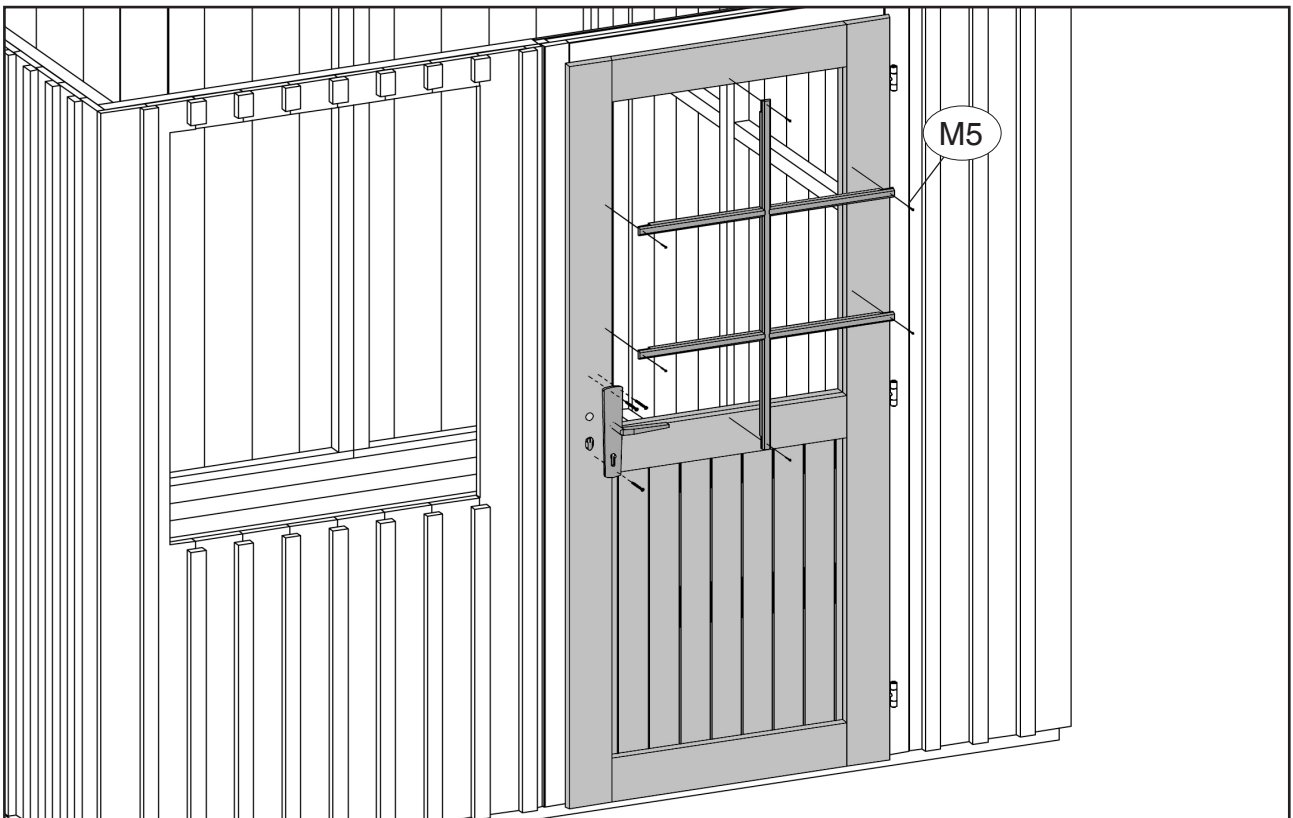
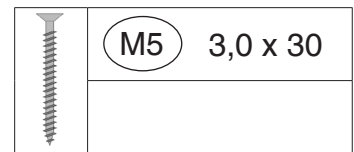


13

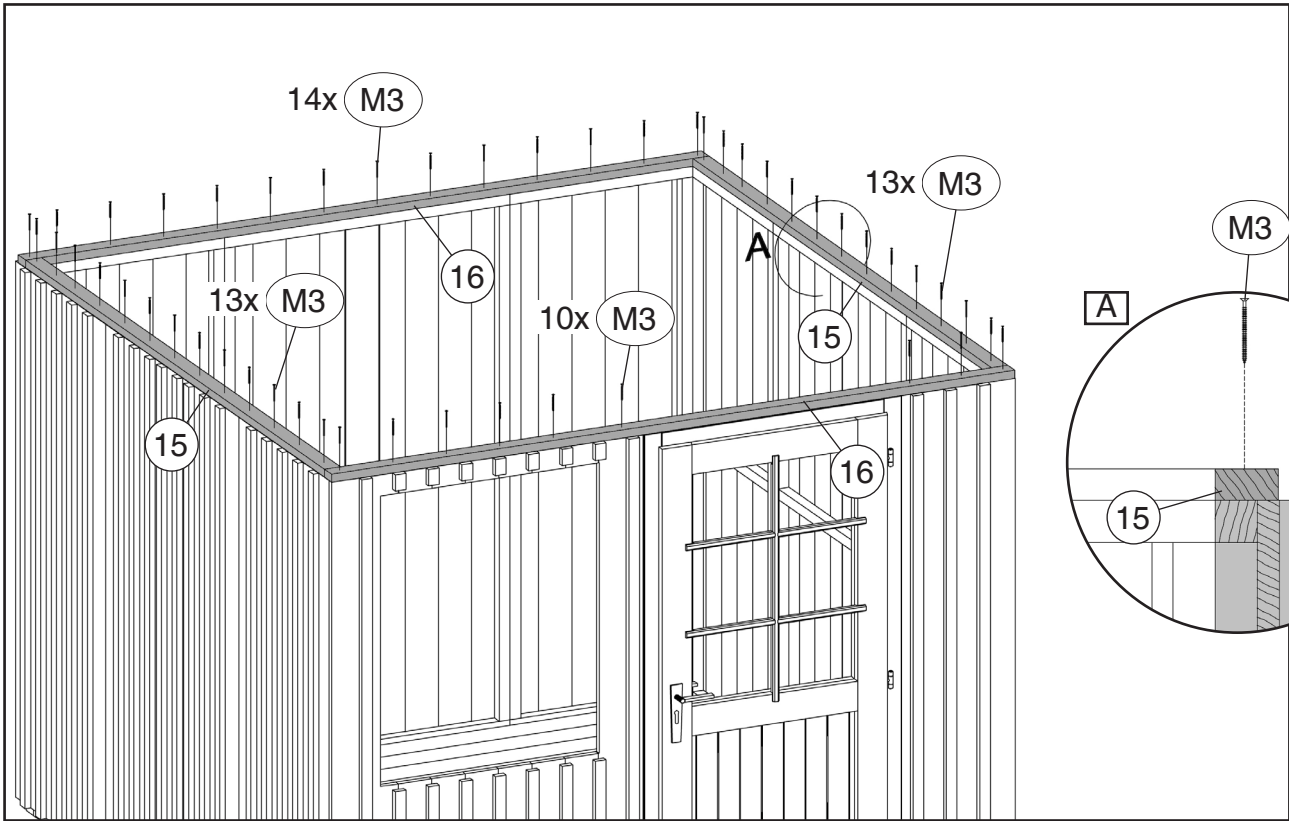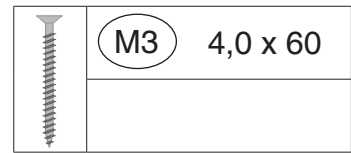



13.1

Draufsicht

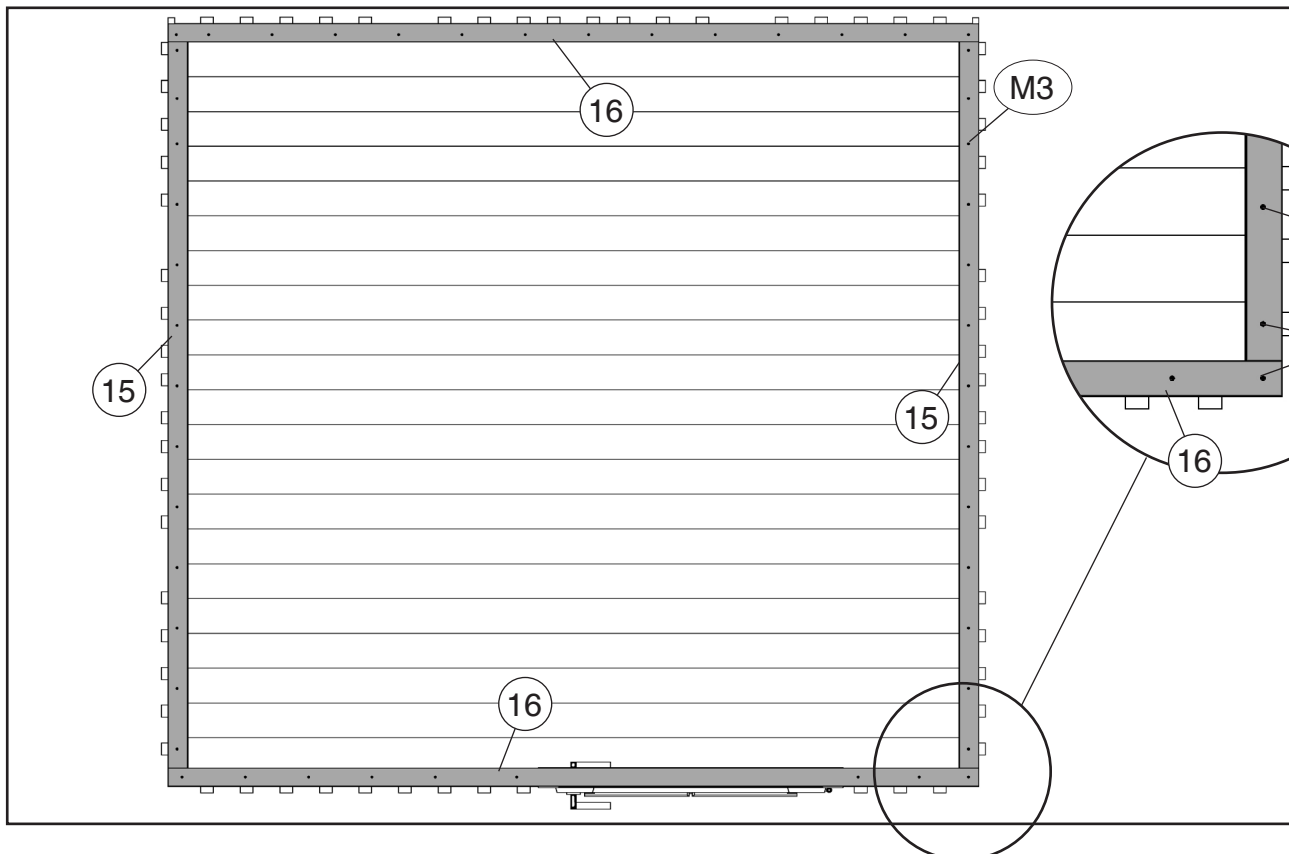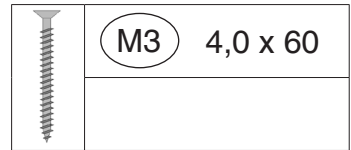



14

	M2	4,5 x 70

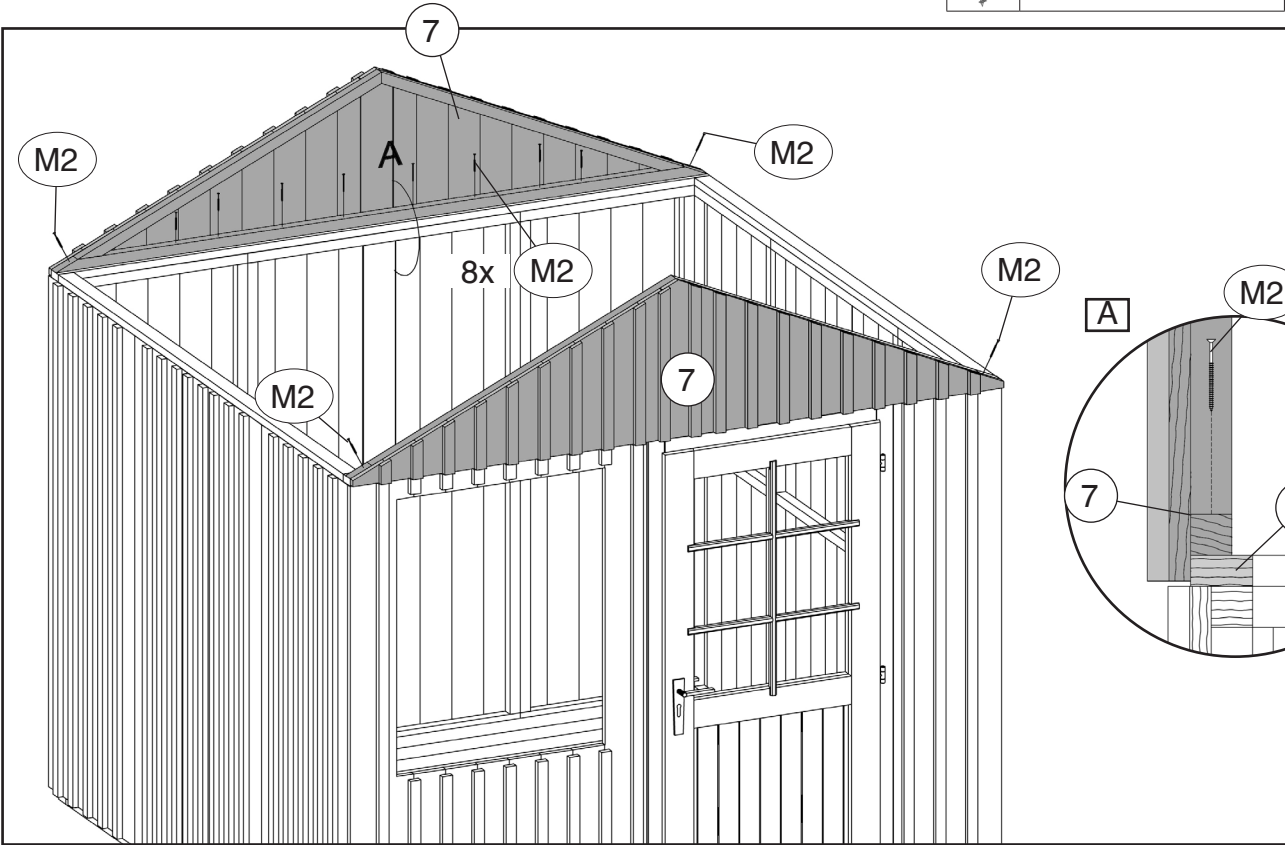


15



	M3	4,0 x 60
	M4	4,0 x 40

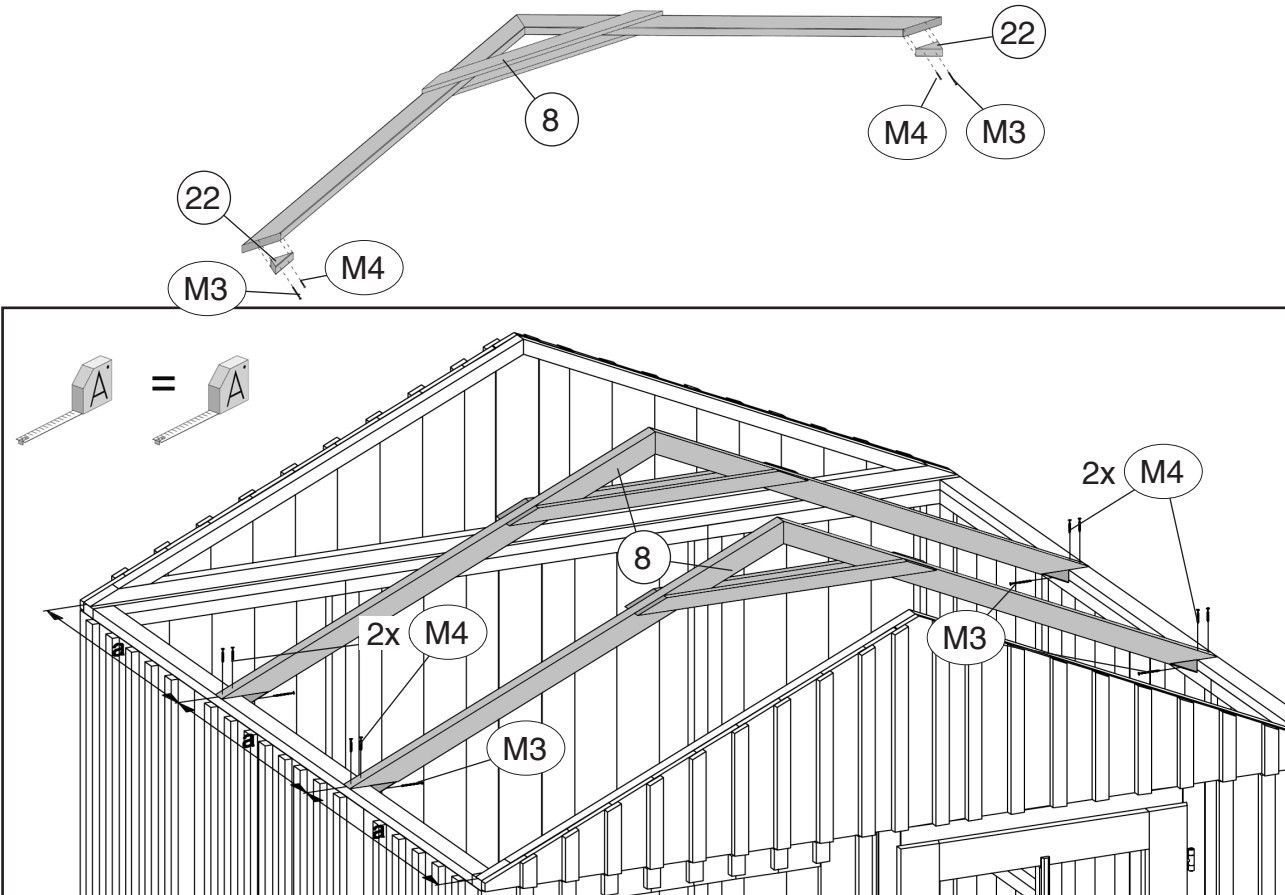



16

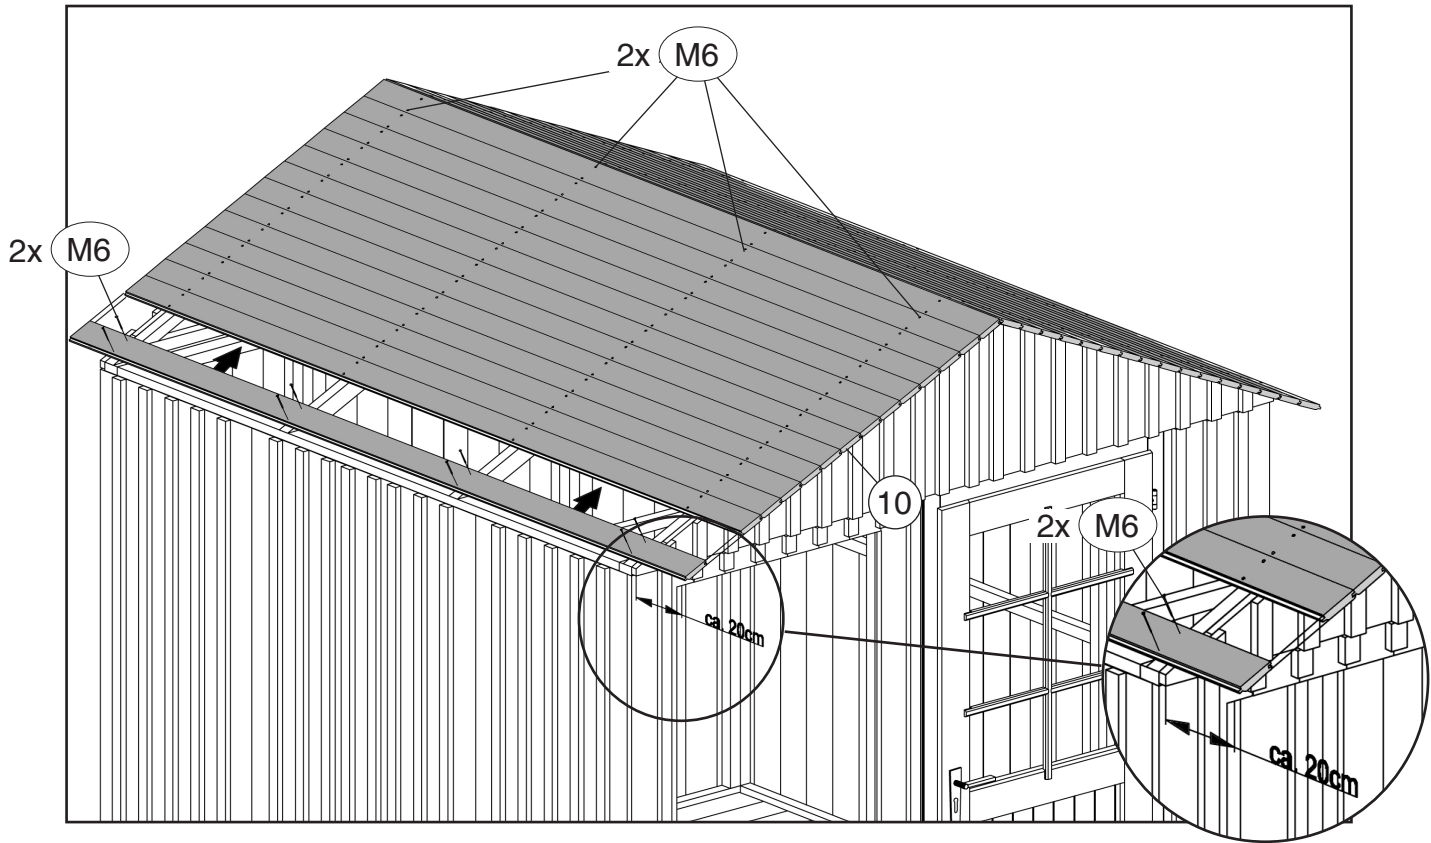



17

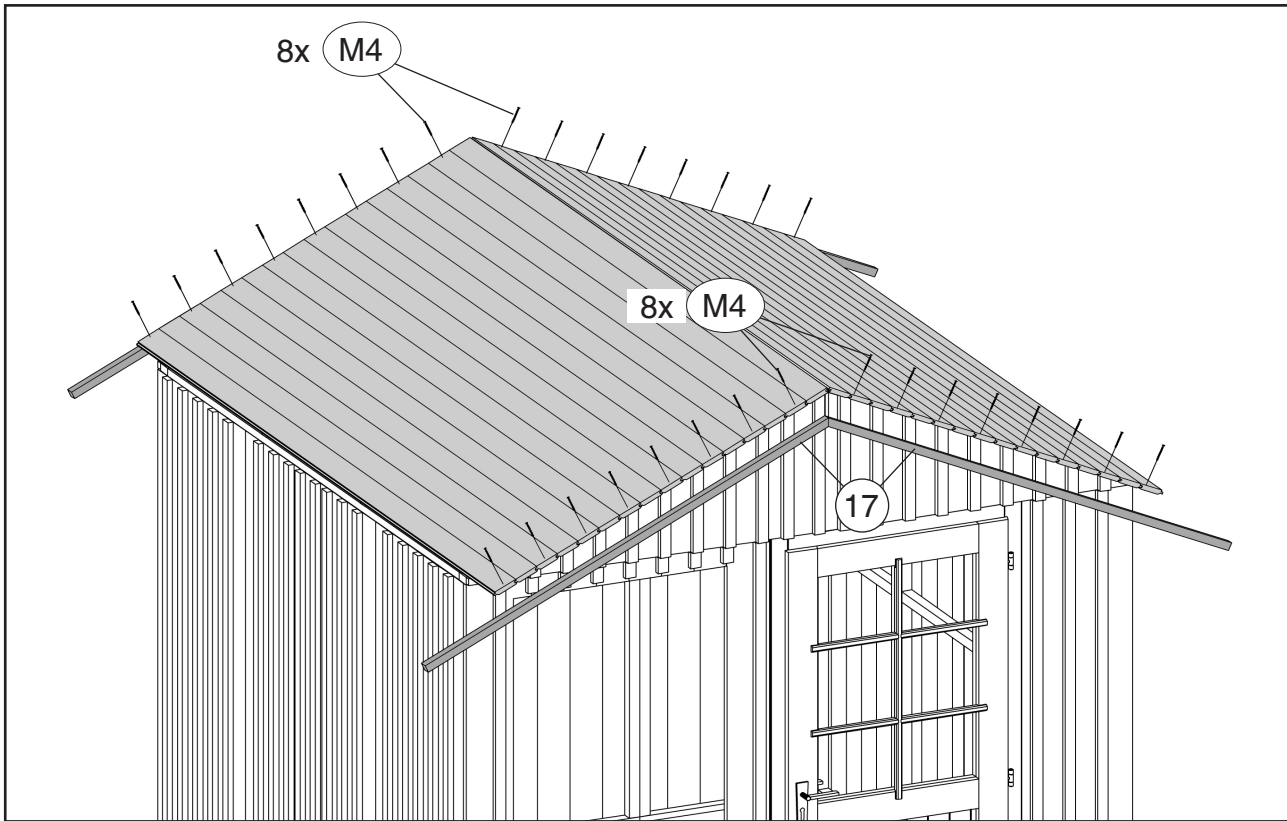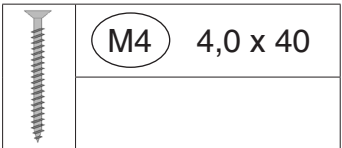


18

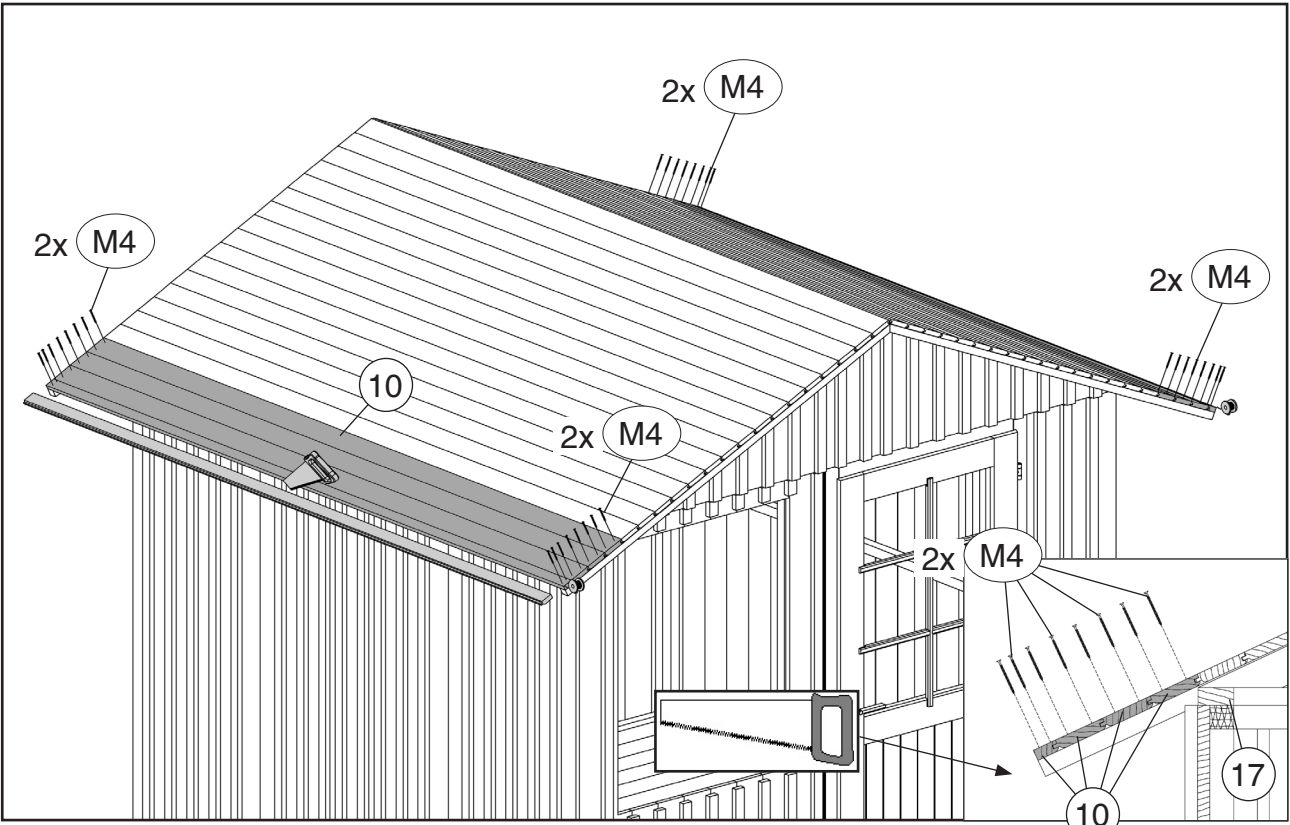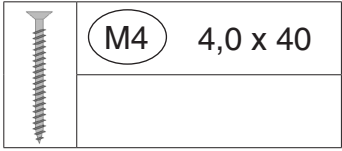


19

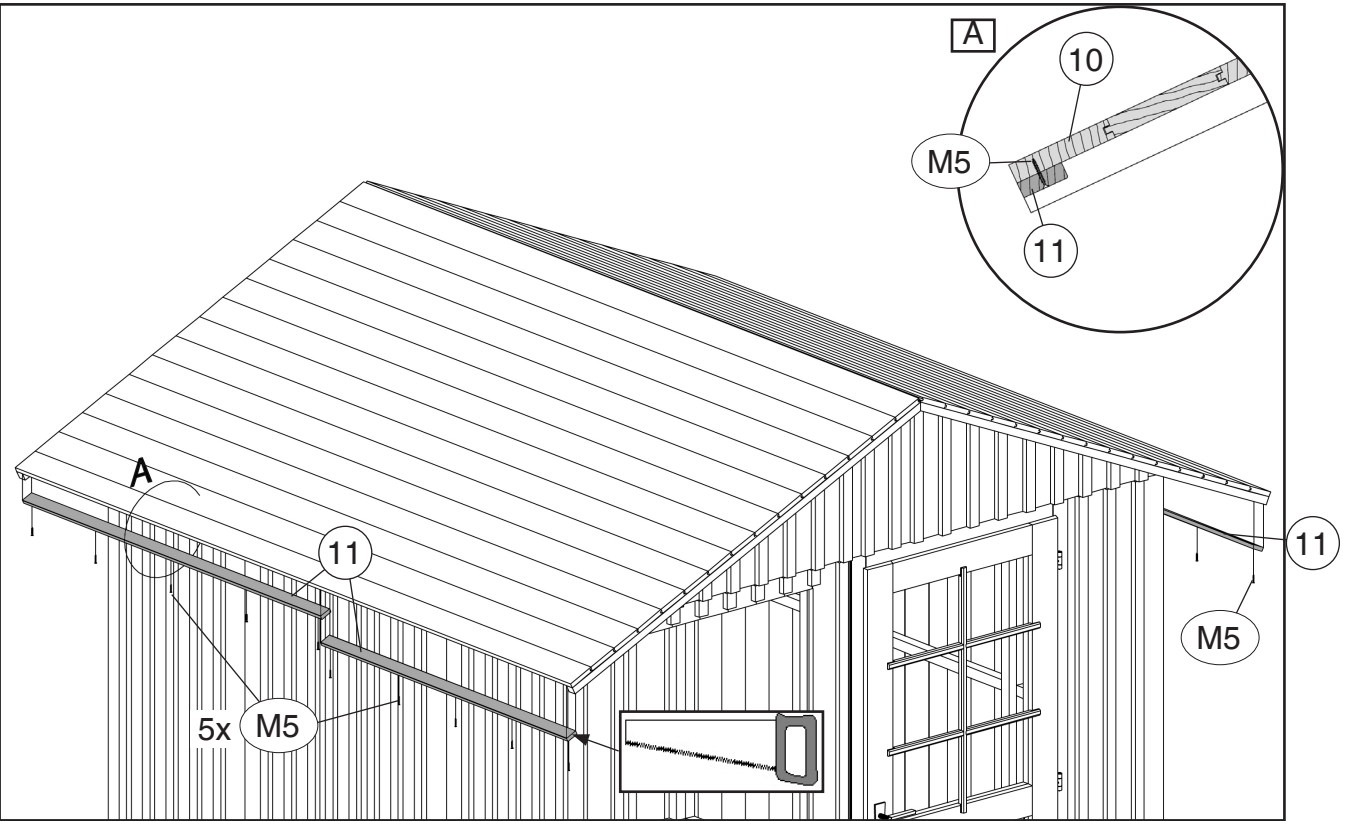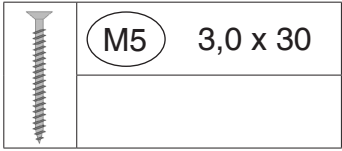




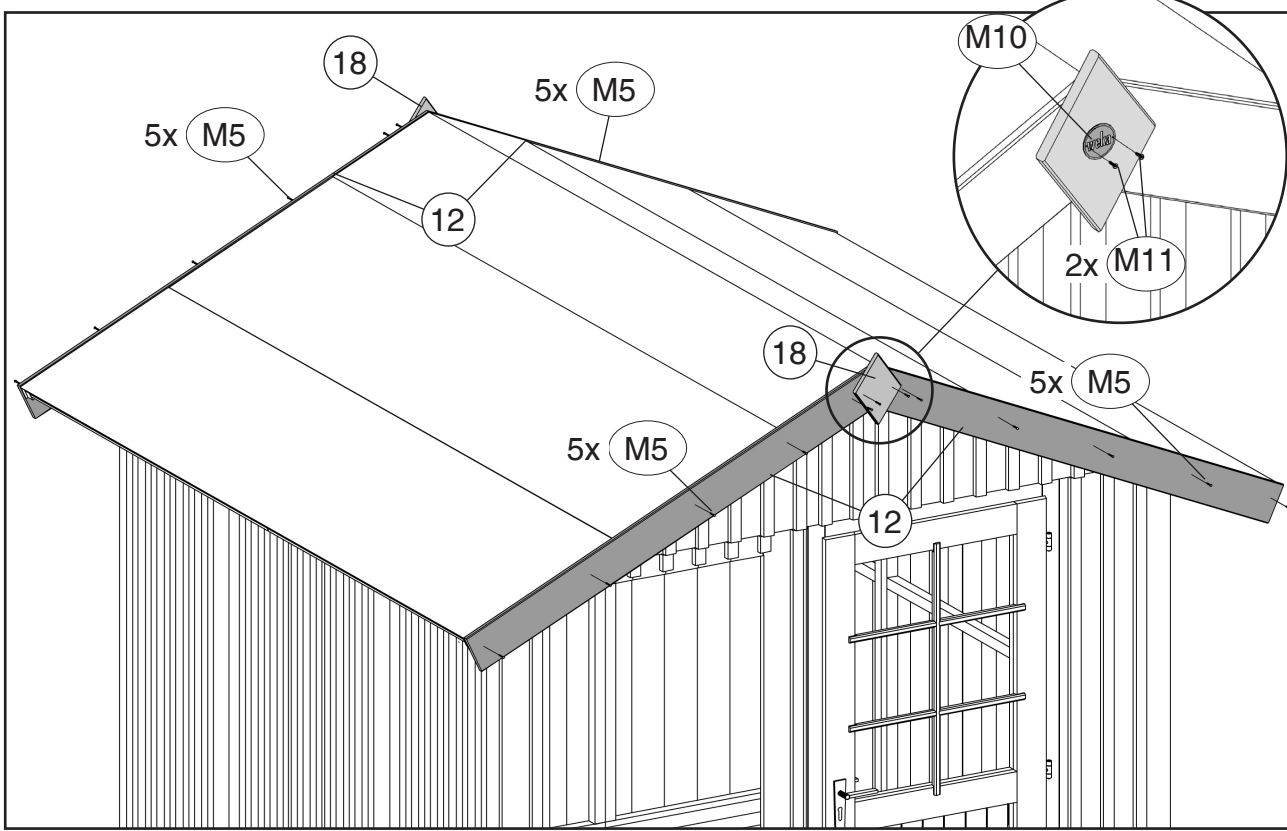
20

	M7	2,0 x 13

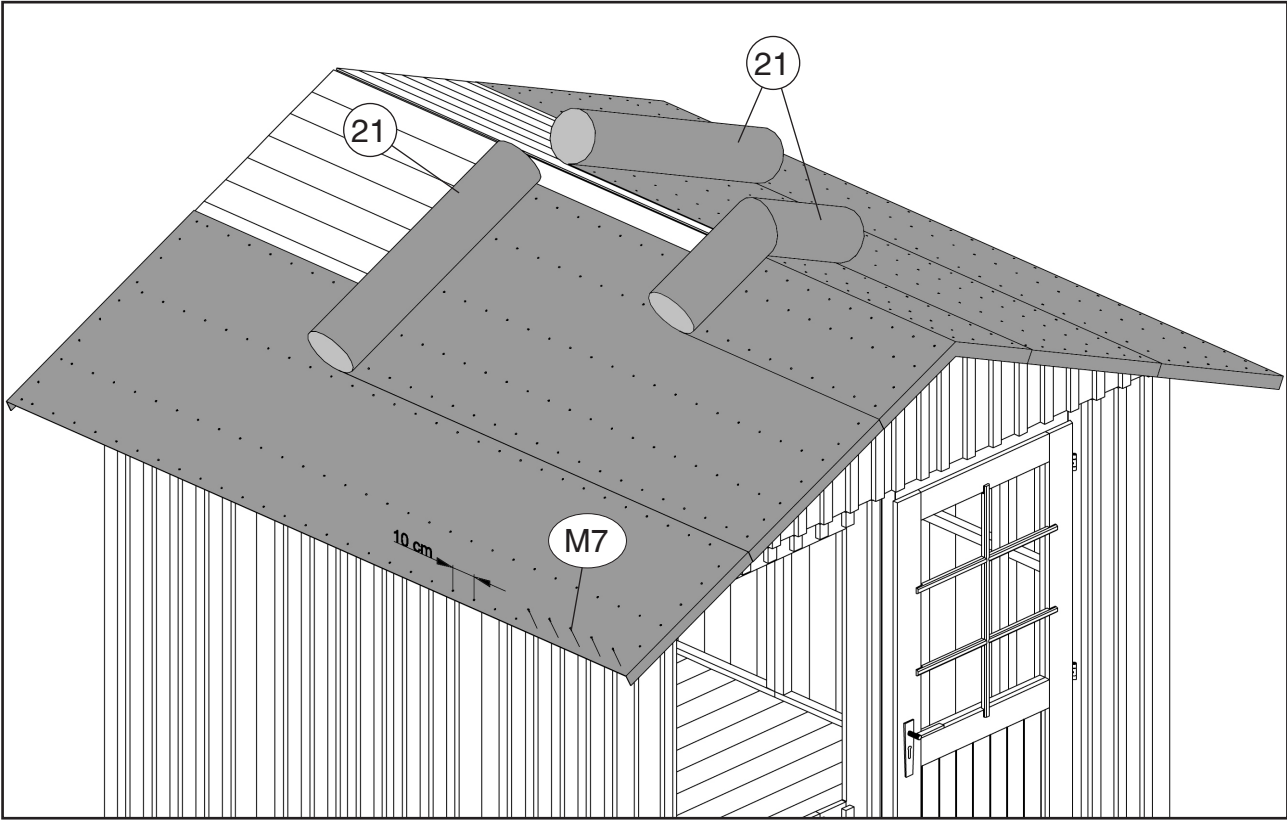


21


	M10	
	M11	2,2 x 9,5
	M5	3,0 x 30




22

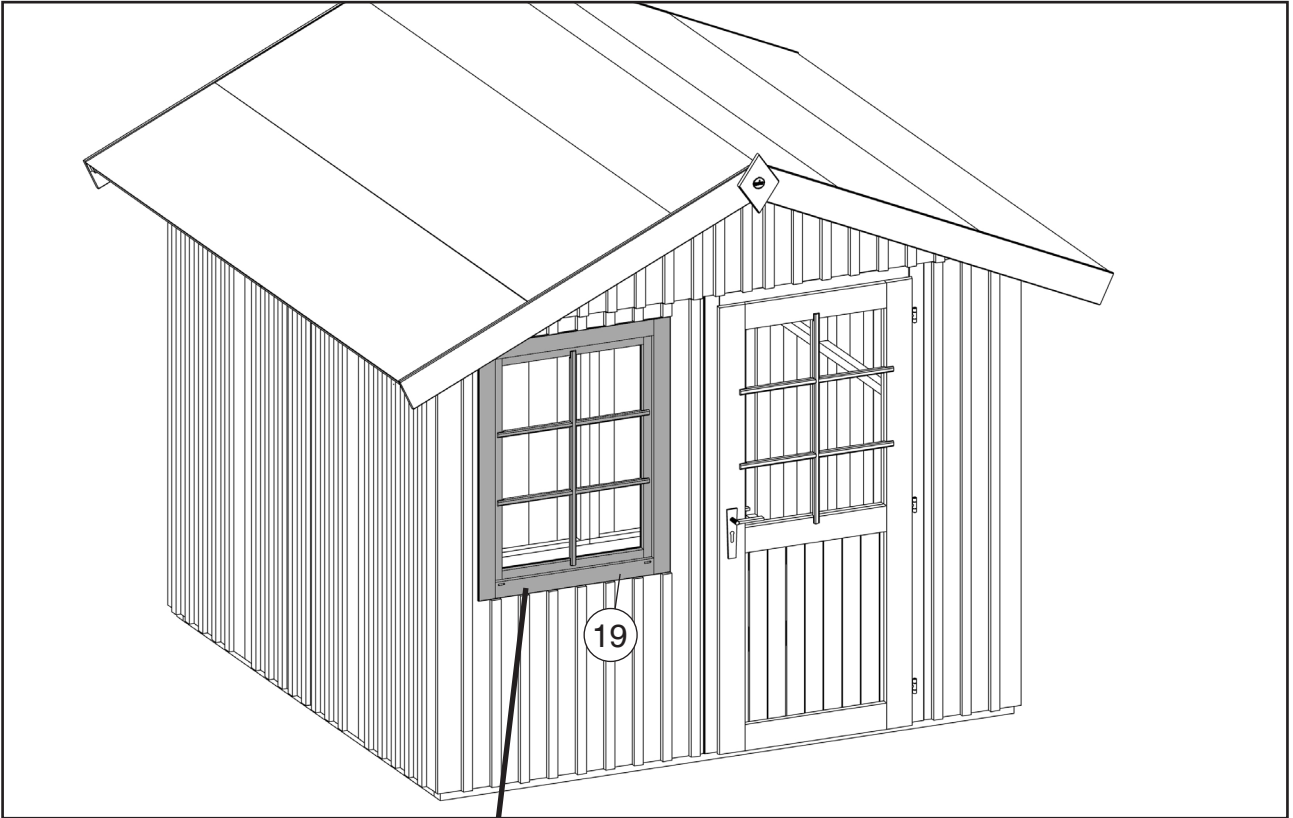

22.1

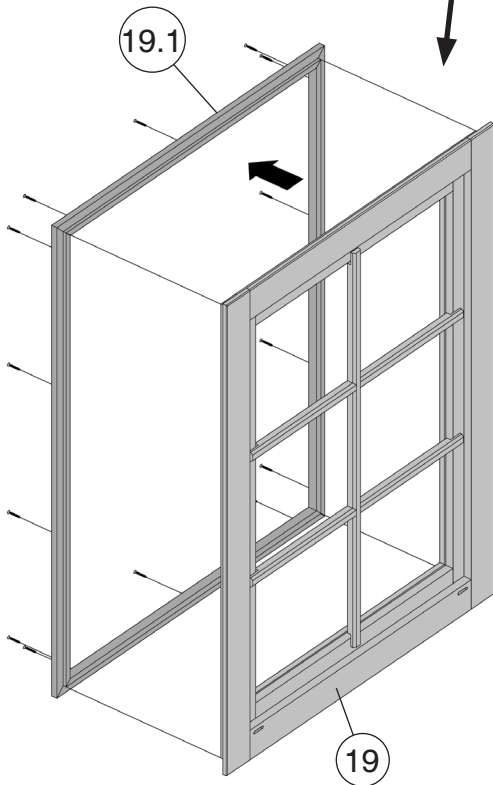


22.2

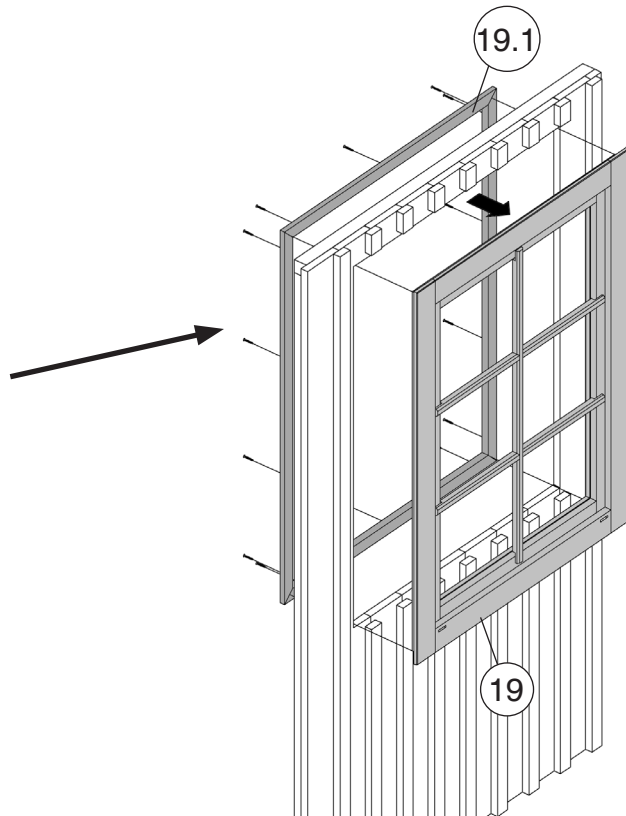


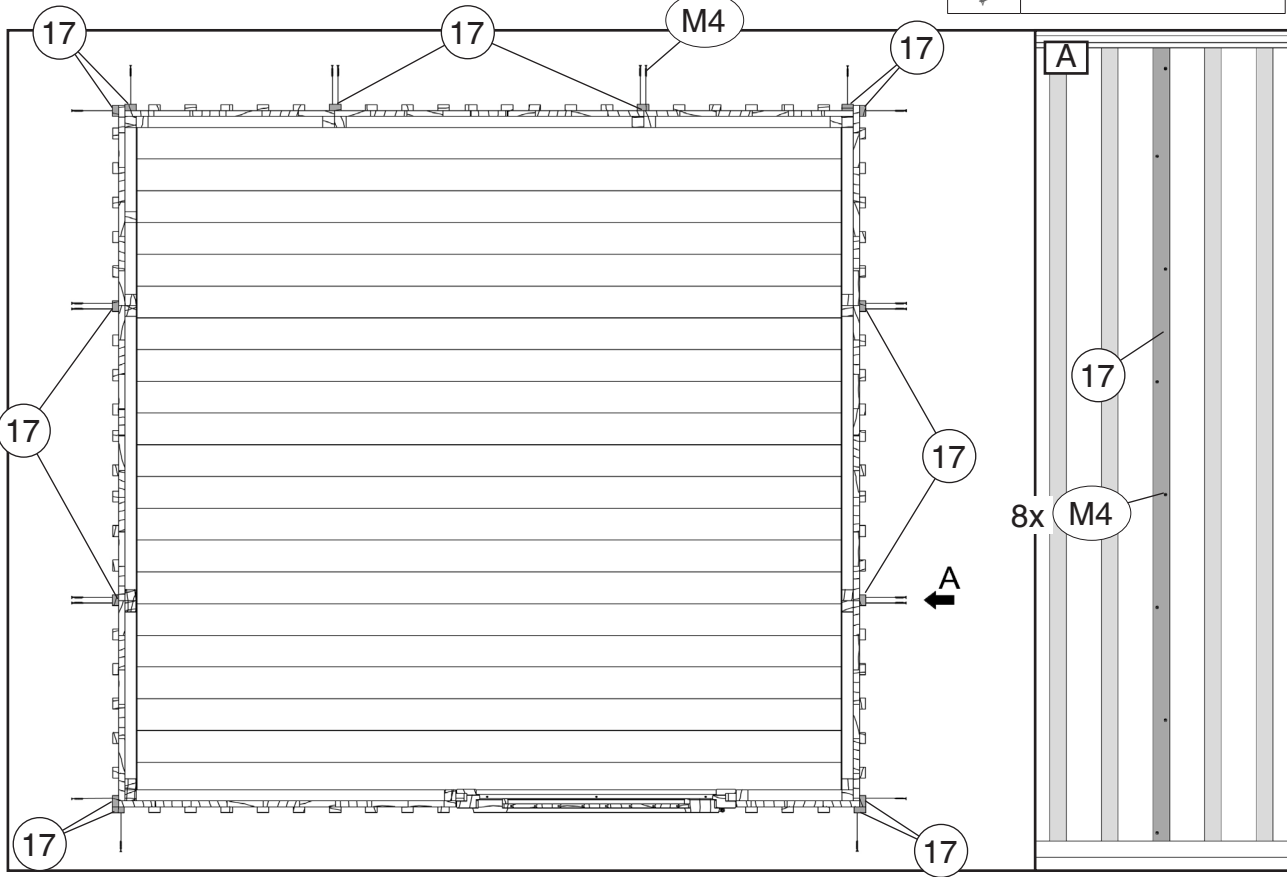
23







	M4 4,0 x 40
--	--------------------

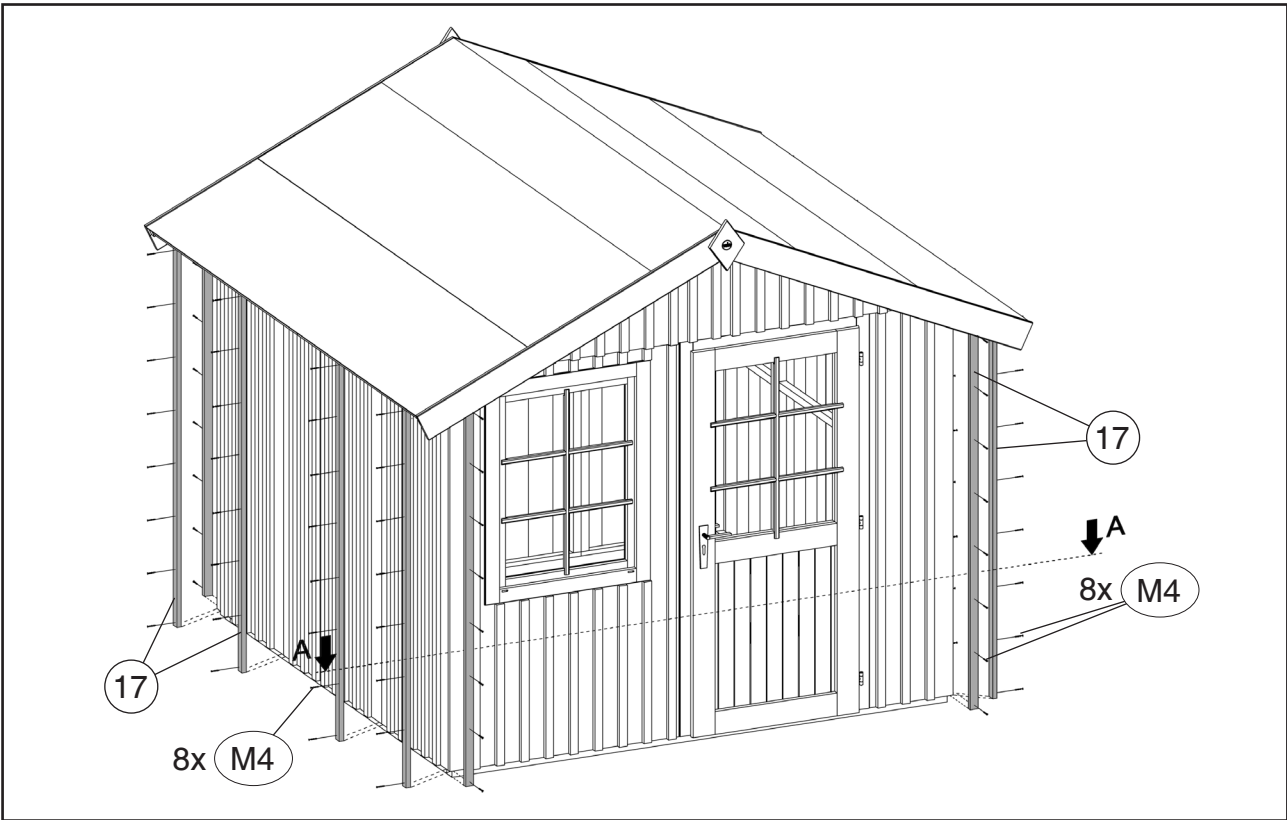

23.1

	M2 4,5 x 70
---	--------------------



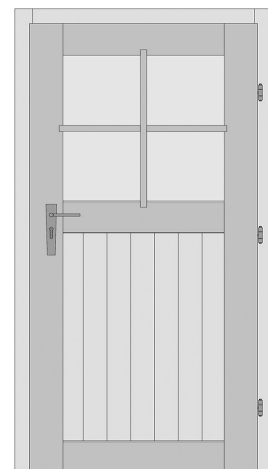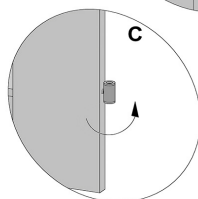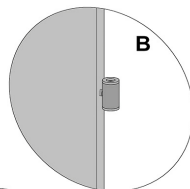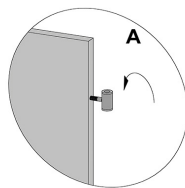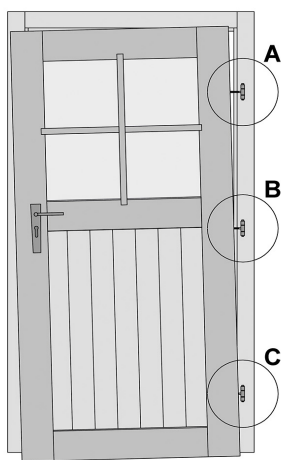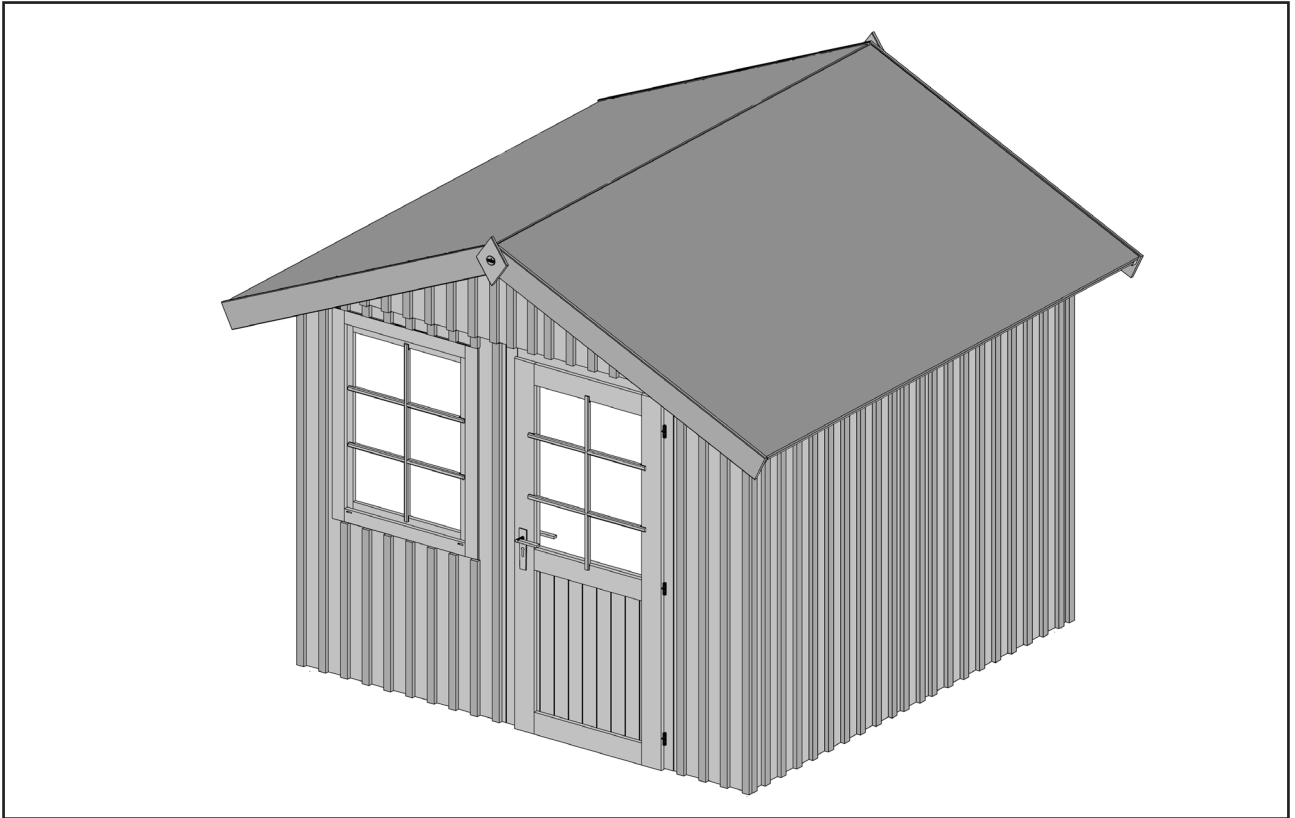

Kennen Sie schon die WEKA- Wellnesswelt?

Jetzt
scannen
und unsere
**Saunen &
Infrarotkabinen**
entdecken!



www.weka-holzbau.com



WEKA Holzbau GmbH

Johannesstr. 16, 17034 Neubrandenburg

Tel.: +49 (0)395 42908-0

Fax: +49 (0)395 42908-83

Mail: info@weka-holzbau.com

Web: www.weka-holzbau.com

MA Art.-Nr.: 800.0286.17.80

© Copyright HRB 3662