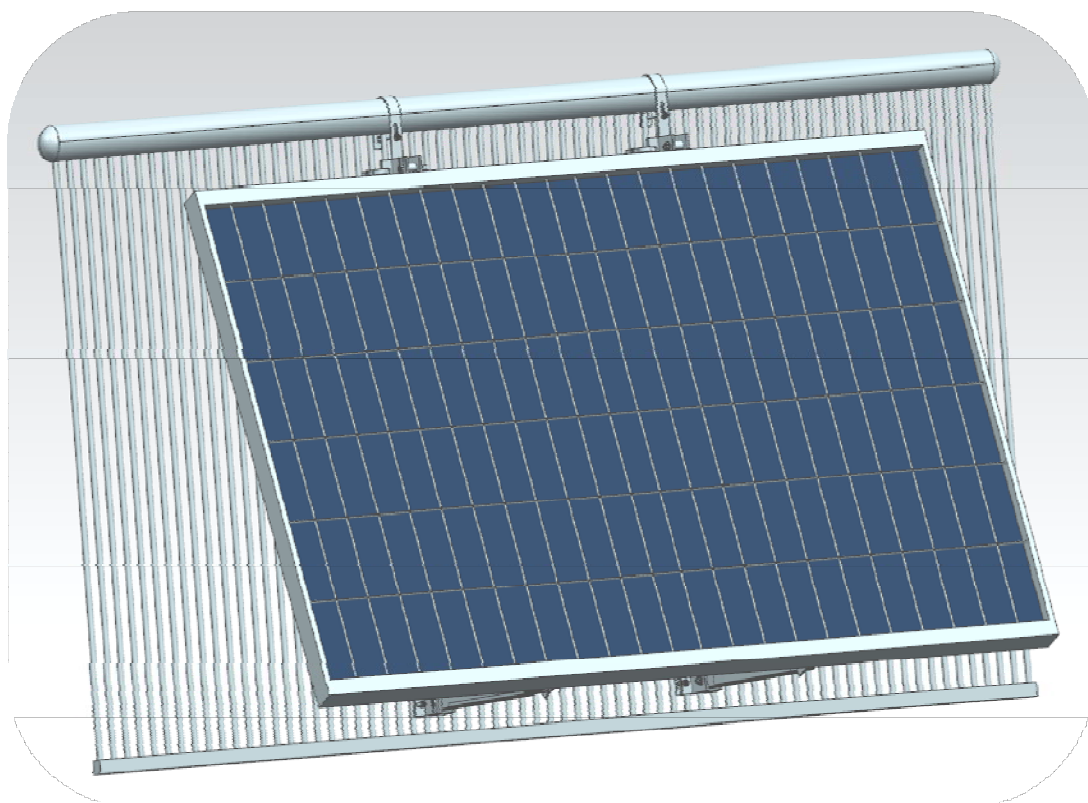


Aluminum Profile Triangle Bracket

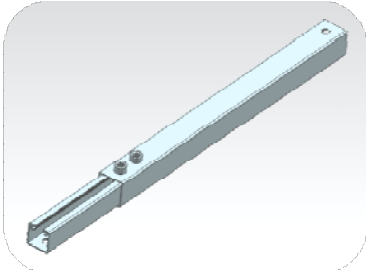
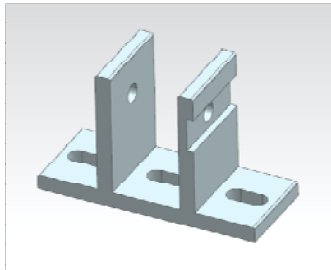
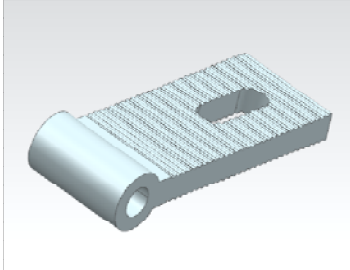
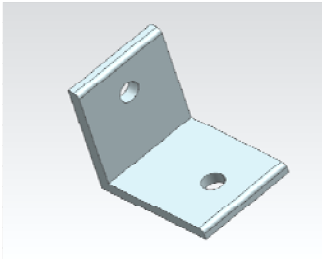
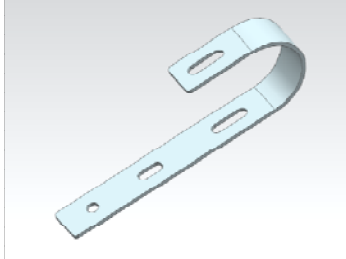
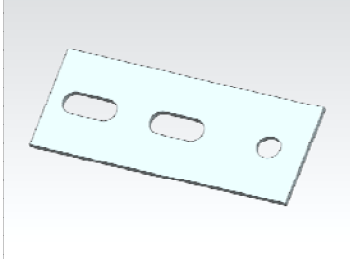
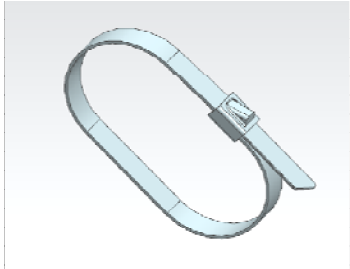
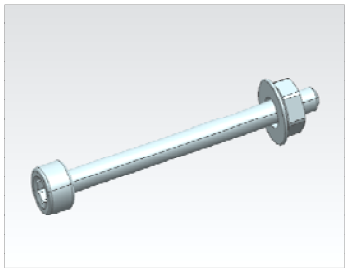
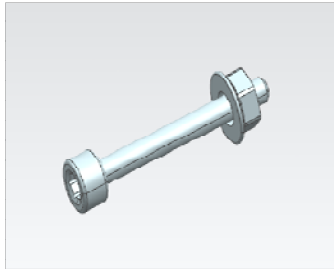
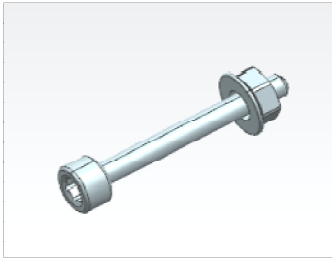
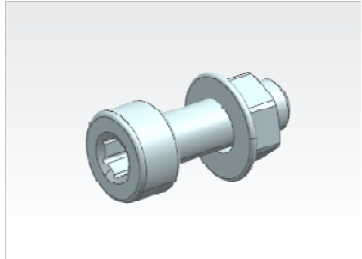
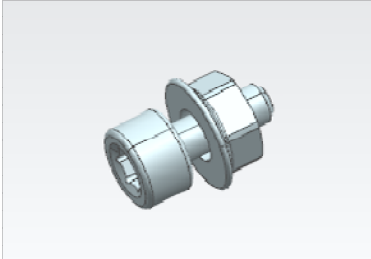
AET- 700

Installation Instructions




Step1 – Introduction of the balcony mounting system


1.1 Parts List

Telescopic rod x2 	Fixed seat x4 	Support columns x2 
Fixed Frame x2 	Round pipe hook x2 	Stainless steel set x4 
Stainless steel tie x4 	Bolt Set M8*85 x2 	Bolt Set M8*55 x4 
Bolt Set M8*45 x8 	Bolt Set M8*20 x8 	Bolt Set M8*16 x4 

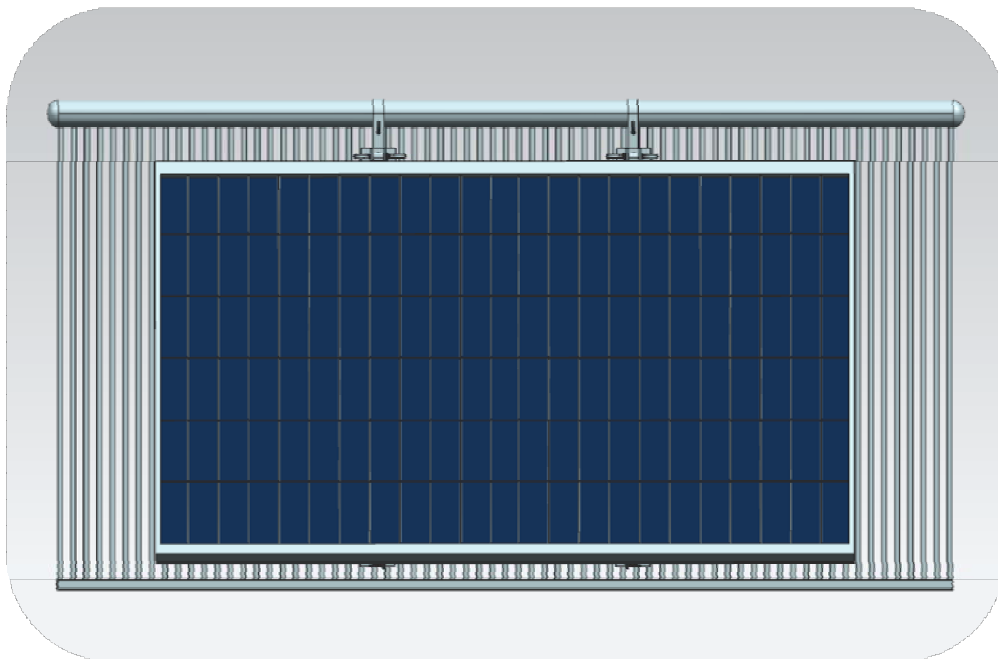
1.2 Effect Drawing




Front View

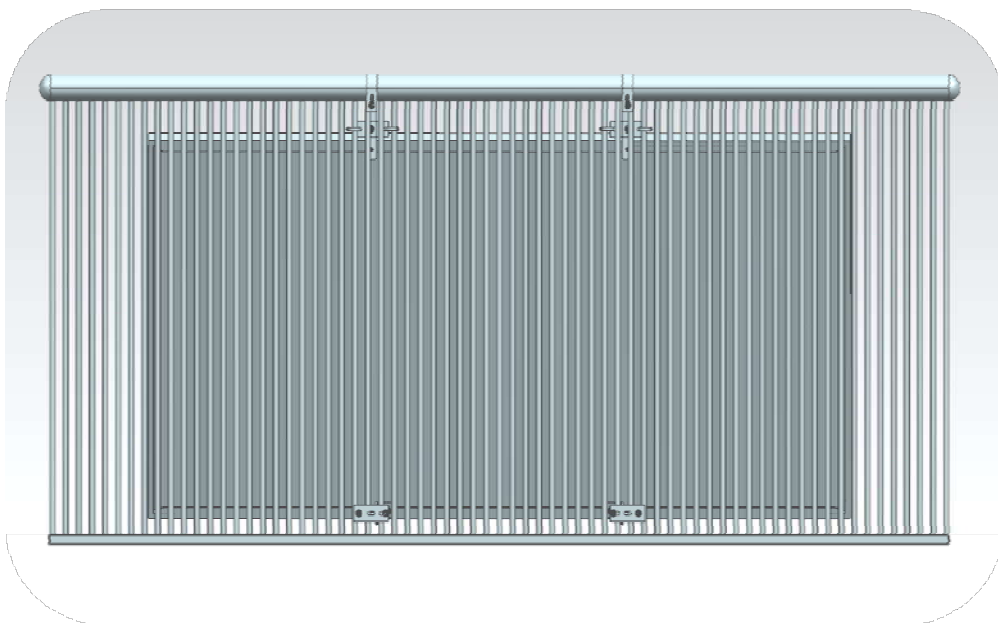

Rear view

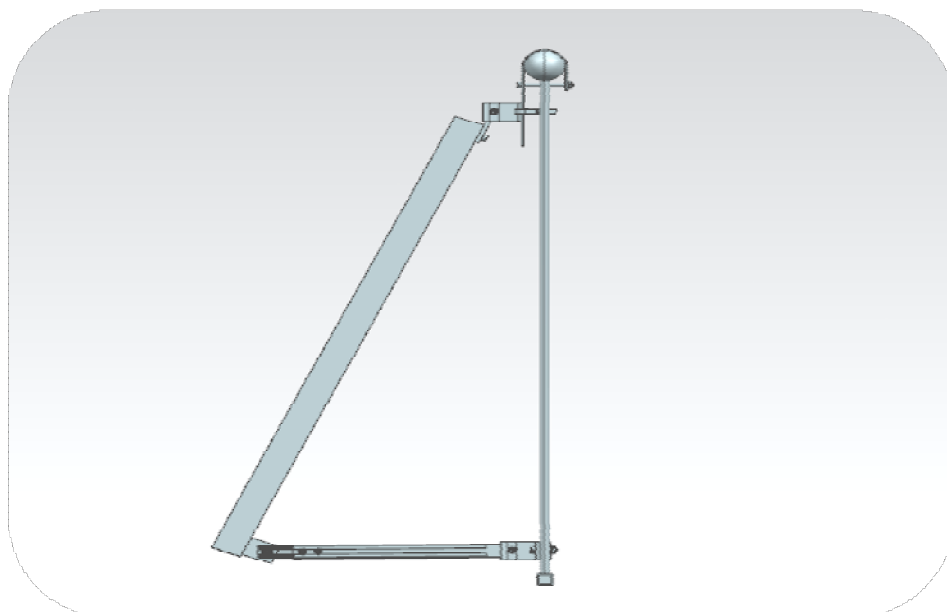


Side view

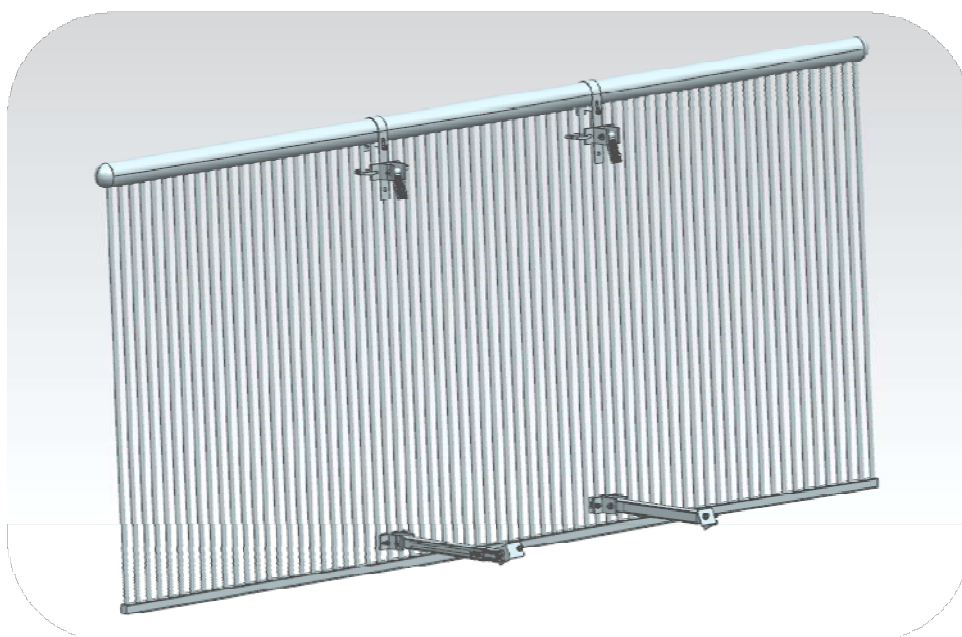


Rendering of bracket

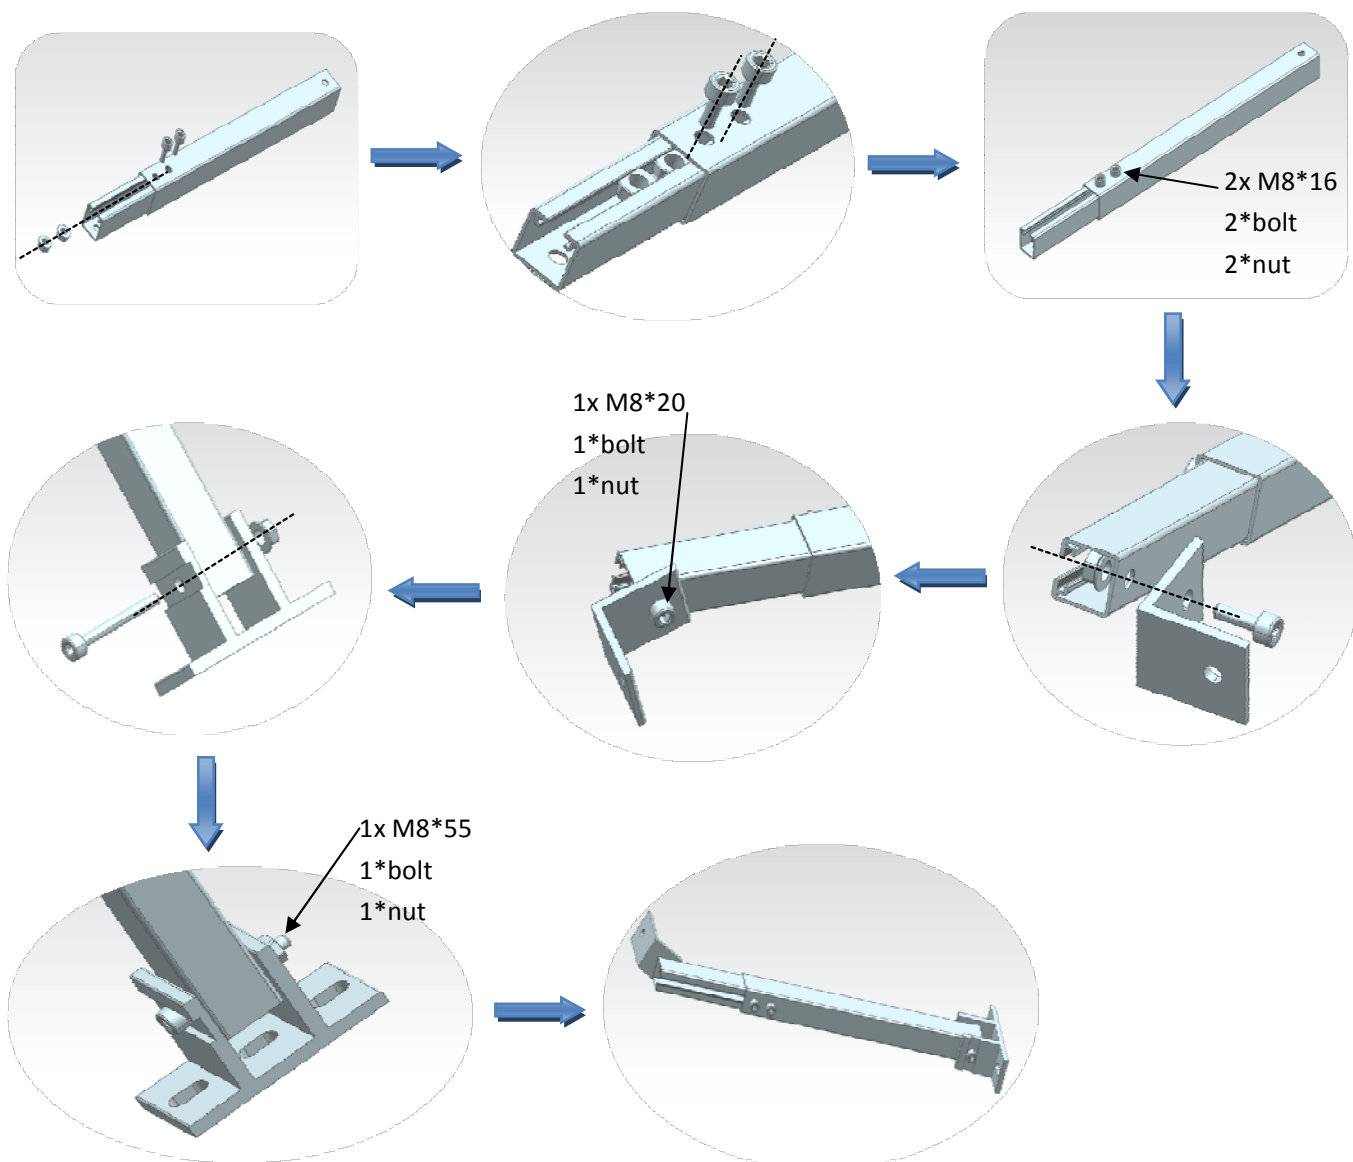Step 2- Installation the telescopic rod



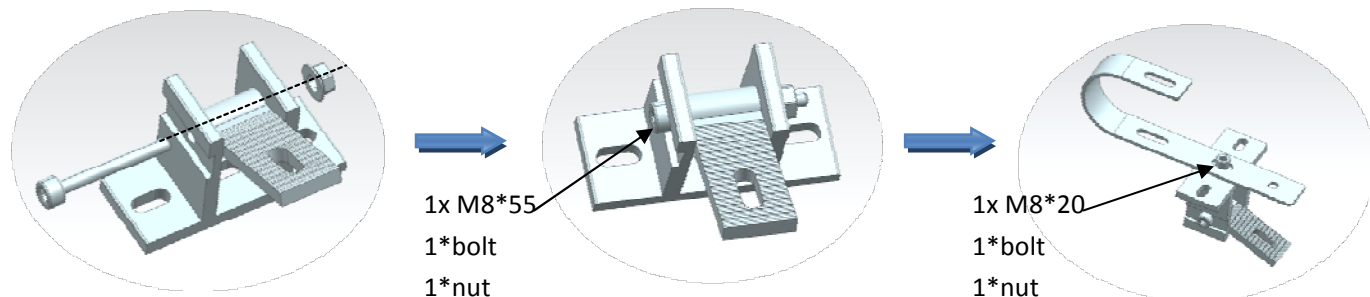
Step 3- Installation the fixed set with round pipe hook



Do the same steps for the other set of tripods.

Step 4- Installation the solar panel.

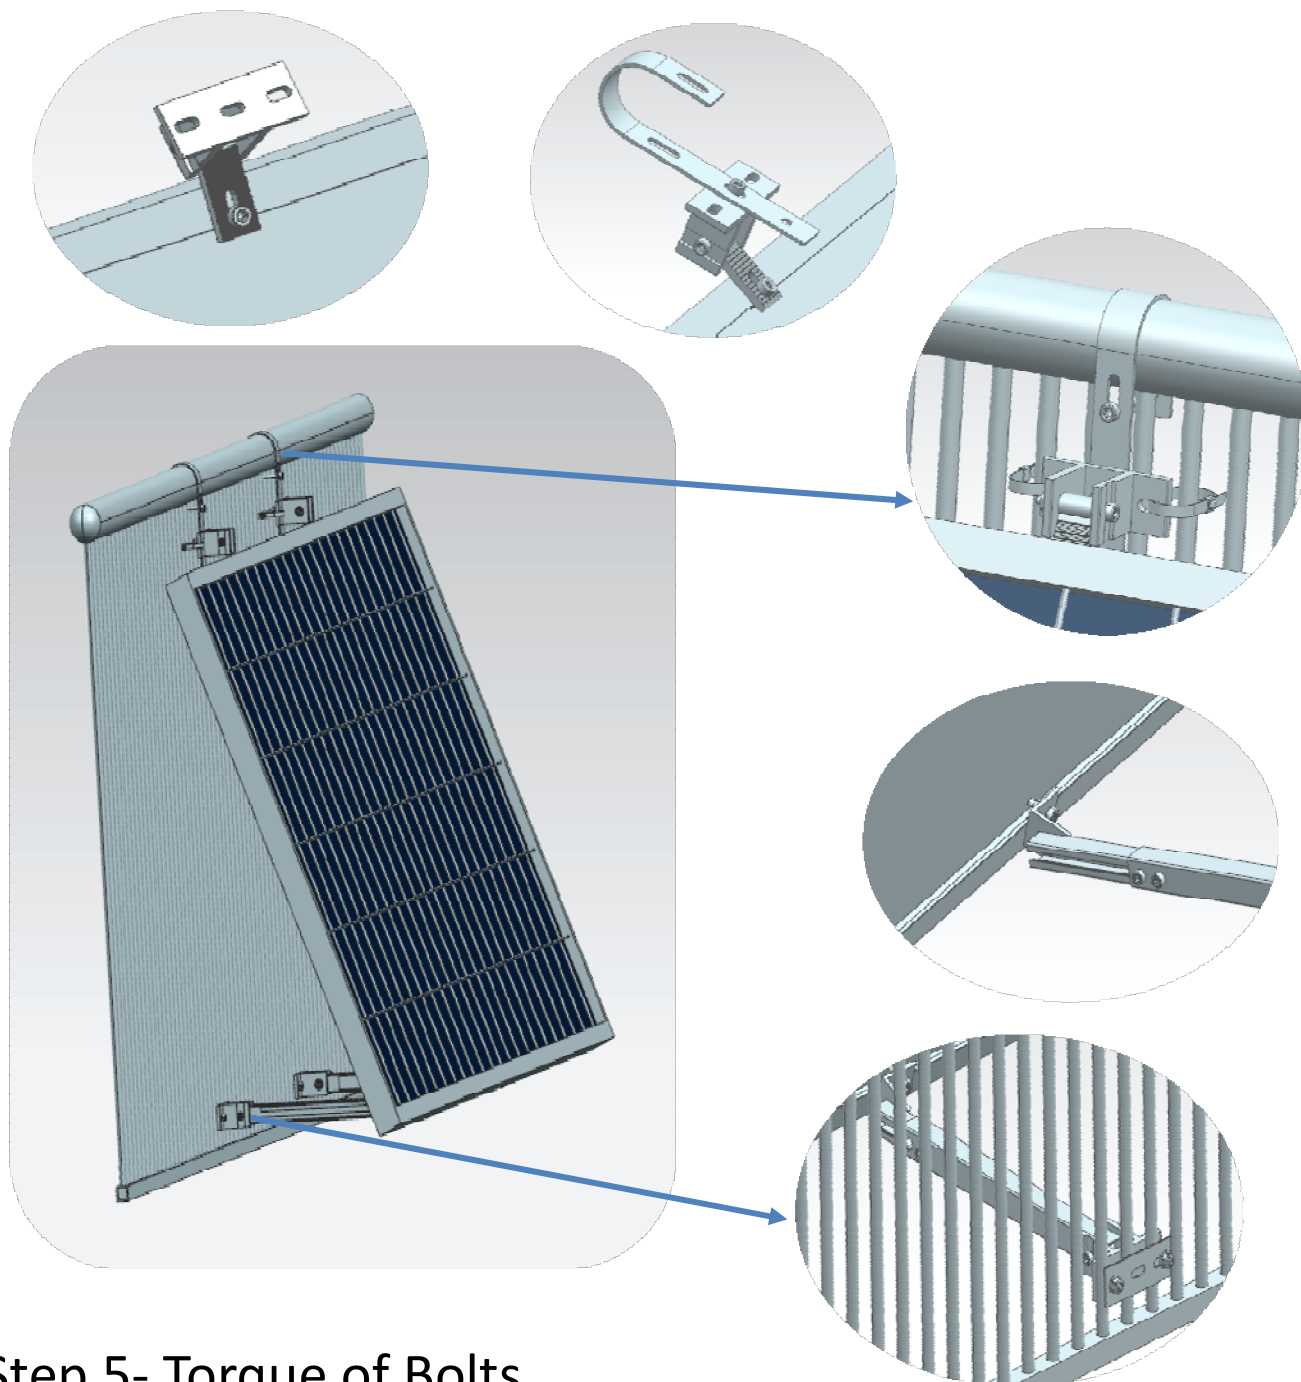Make it easier to change to any angel of the solar panel.



Step 5- Torque of Bolts

Bolt	Torque(N*m)
M8	8-10